


Position of Parts in Engine Compartment <RHD>

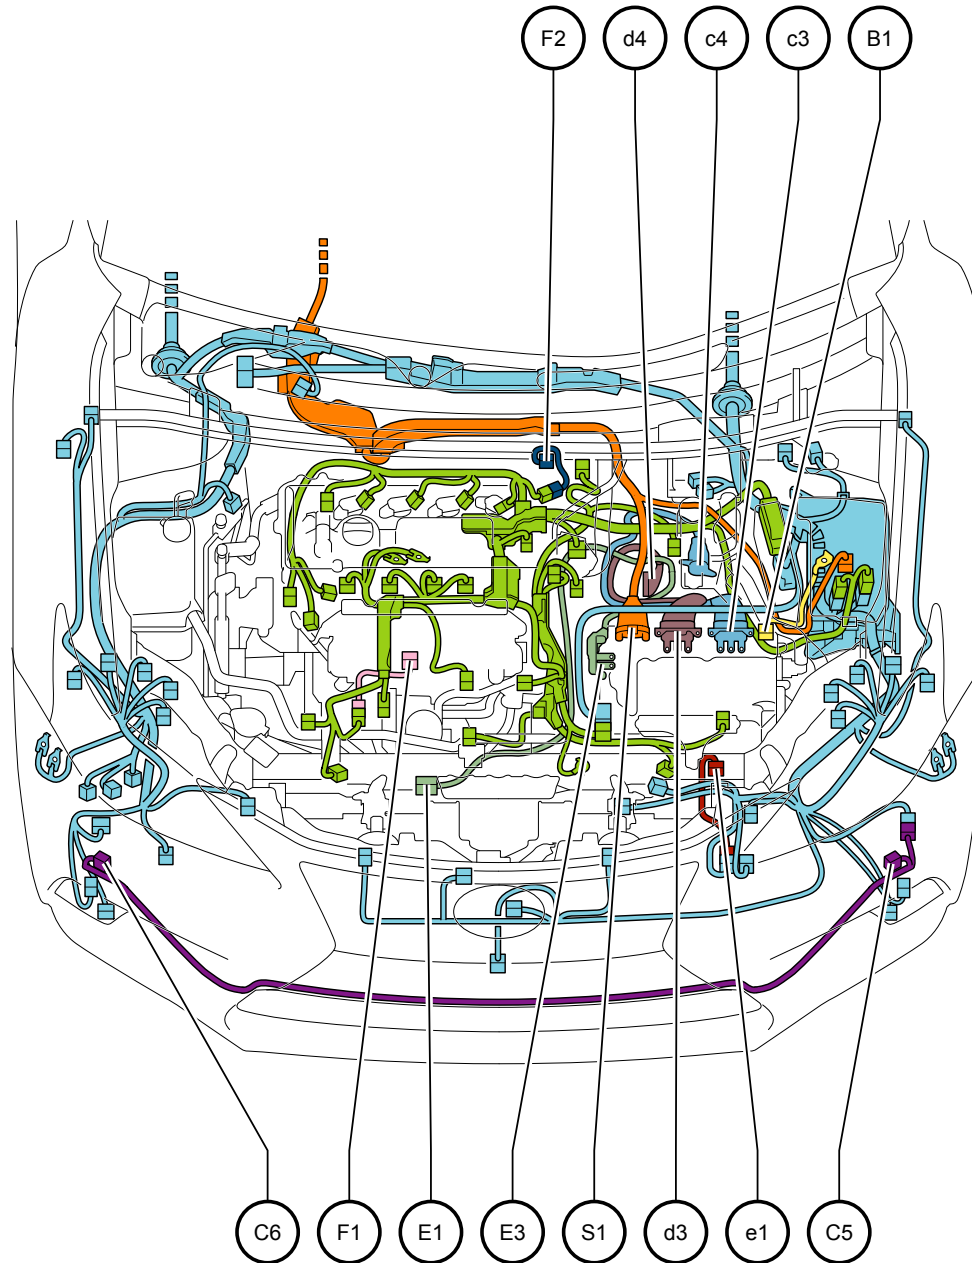

Position of Parts in Engine Compartment <RHD>

- B 1 Inverter Assembly with Converter
- C 5 Front No. 1 Ultrasonic Sensor LH
- C 6 Front No. 1 Ultrasonic Sensor RH
- E 1 Compressor Assembly with Motor
- E 3 Inverter Assembly with Converter
- F 1 Knock Control Sensor
- F 2 Engine Coolant Temperature Sensor (for Exhaust Heat Recirculation System)
- S 1 Inverter Assembly with Converter
- c 3 Inverter Assembly with Converter
- c 4 No. 2 Motor Generator
- d 3 Inverter Assembly with Converter
- d 4 No. 1 Motor Generator
- e 1 Water Pump Assembly with Motor

Position of Parts in Engine Compartment <RHD>

