



Position of Parts in Instrument Panel <LHD>







 



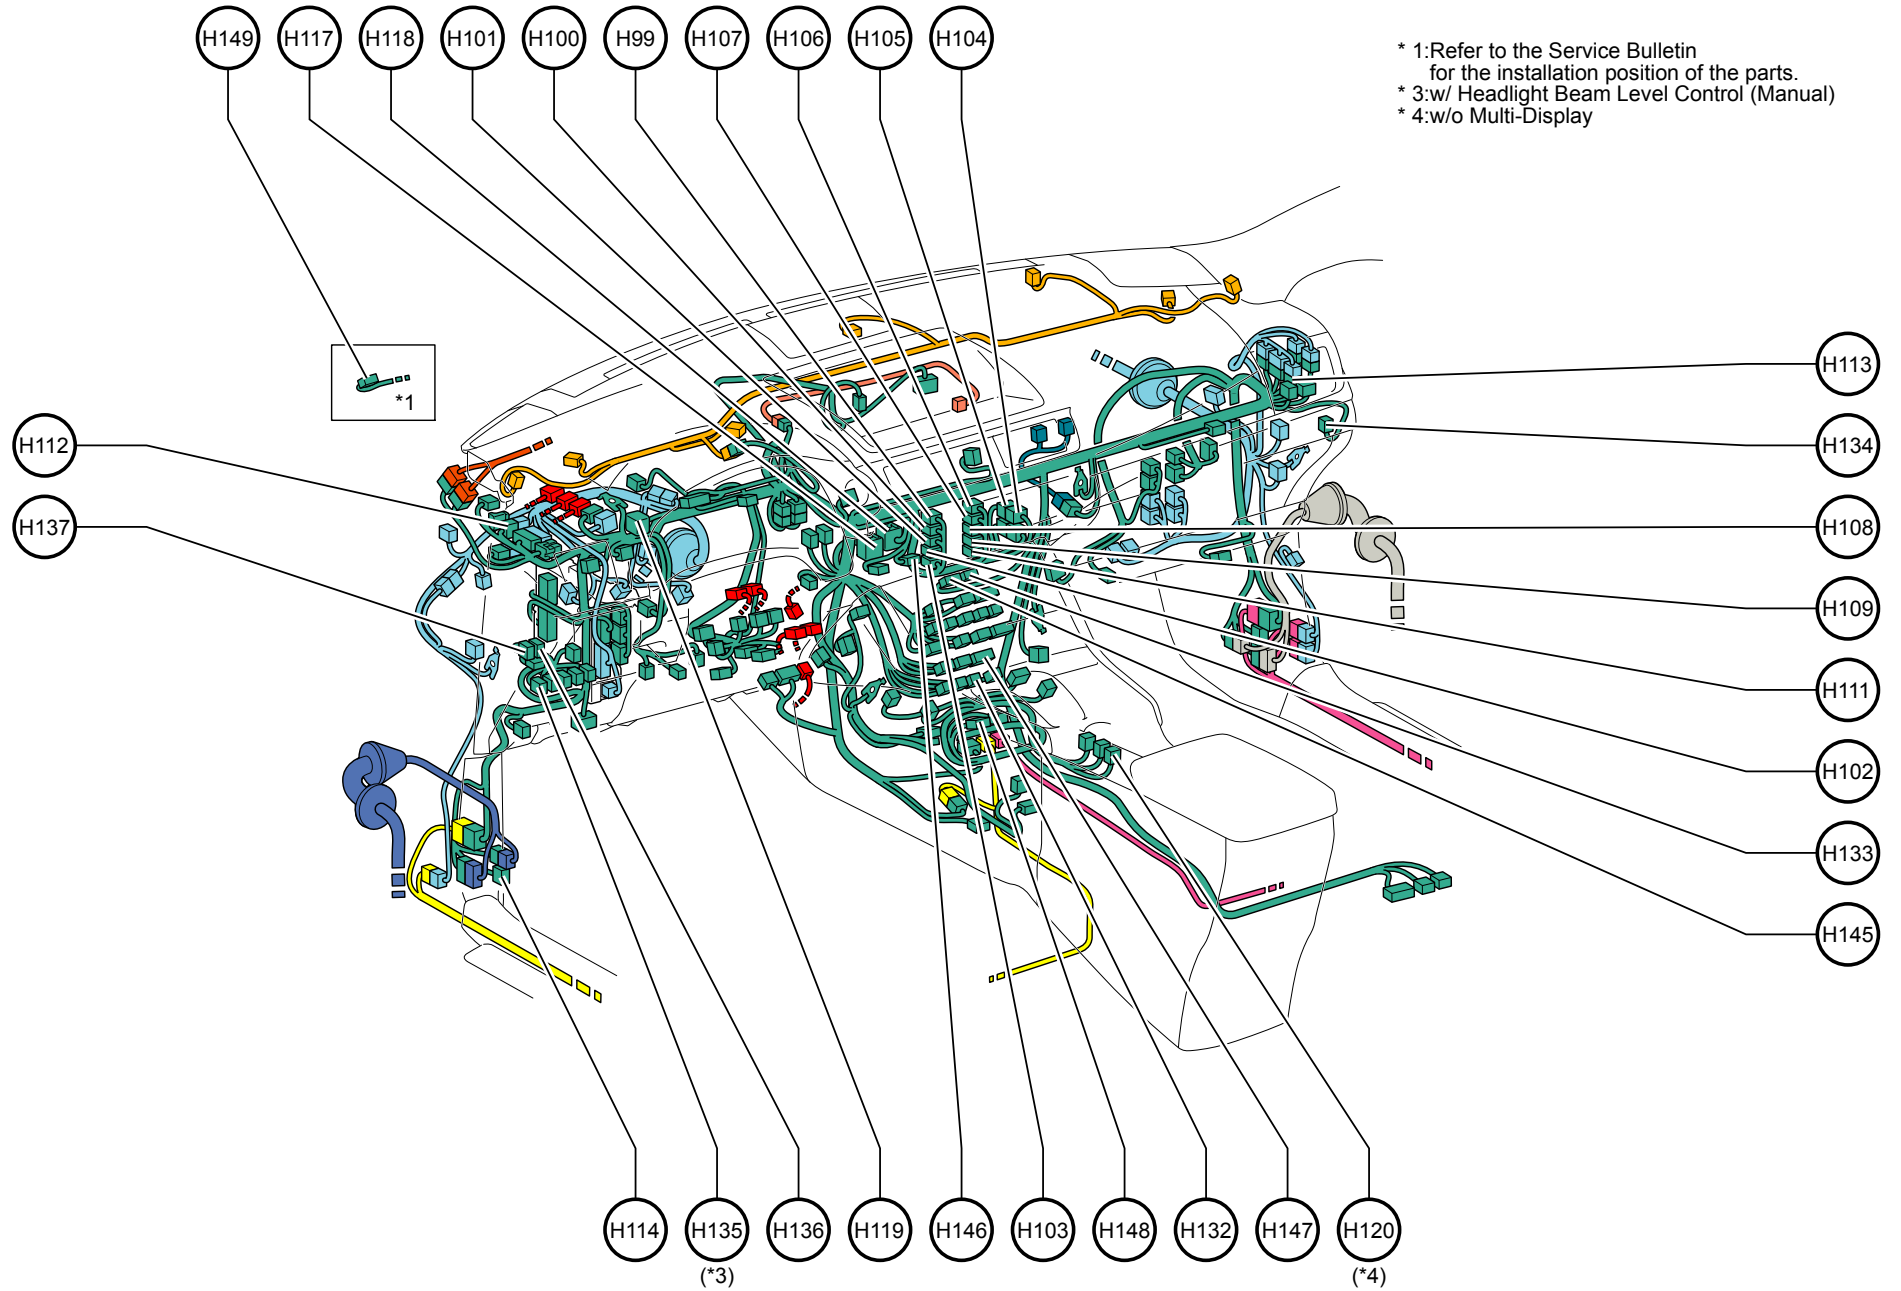


H 99	Junction Connector
H 100	Junction Connector
H 101	Junction Connector
H 102	Junction Connector
H 103	Junction Connector
H 104	Junction Connector
H 105	Junction Connector
H 106	Junction Connector
H 107	Junction Connector
H 108	Junction Connector
H 109	Junction Connector
H 111	Junction Connector
H 112	Junction Connector
H 113	Junction Connector
H 114	Fuse Block No. 1
H 117	Junction Connector
H 118	Junction Connector
H 119	Junction Connector
H 120	No. 1 Stereo Jack Adapter Assembly
H 132	Radio Receiver Assembly
H 133	Telematics Transceiver
H 134	Airbag Cut Off Switch Cylinder Sub-Assembly
H 135	Headlight Leveling Switch
H 136	Outer Mirror Switch Assembly
H 137	Retractable Outer Mirror Switch
H 145	Telematics Transceiver
H 146	Mayday Battery
H 147	Radio Receiver Assembly
H 148	Remote Operation Controller Assembly
H 149	Telephone Transceiver Assembly

Position of Parts in Instrument Panel <LHD>

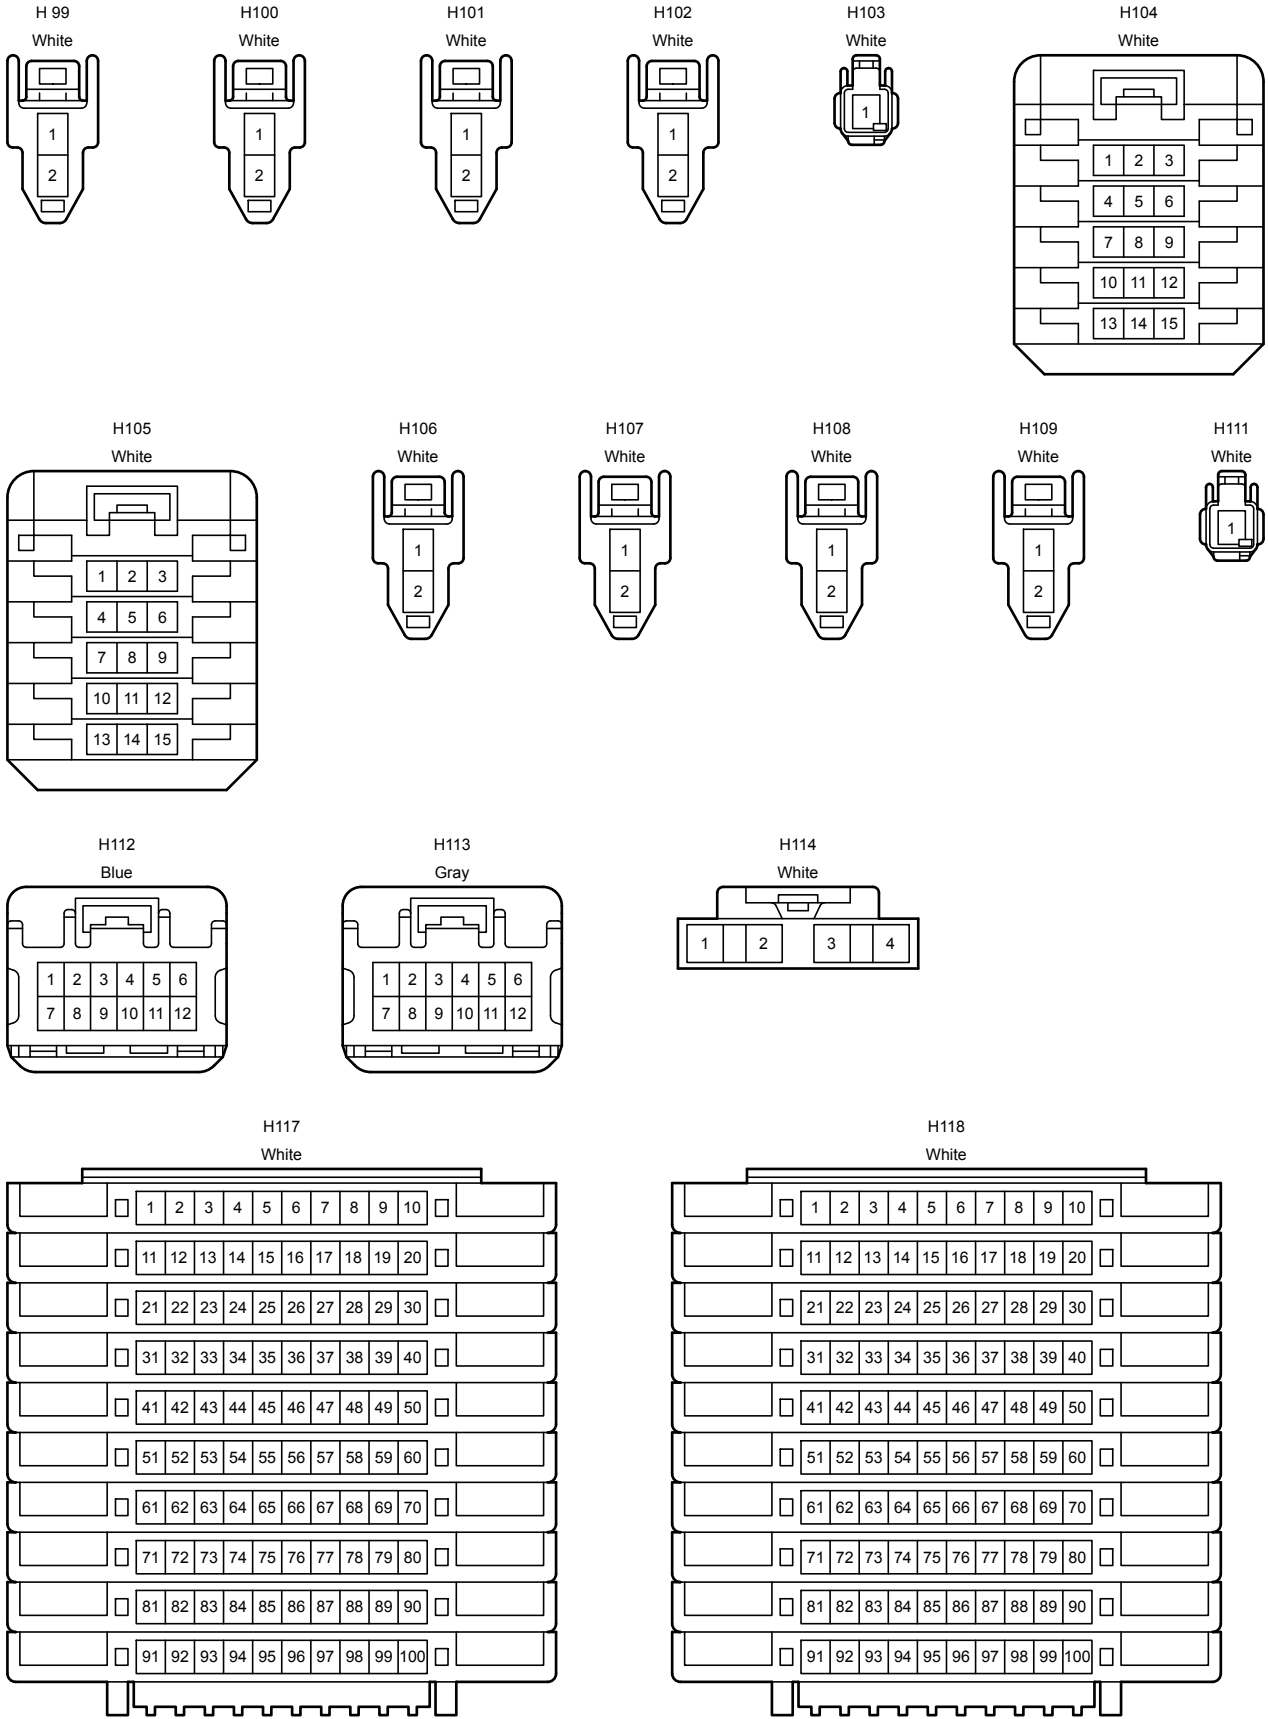


Position of Parts in Instrument Panel <LHD>

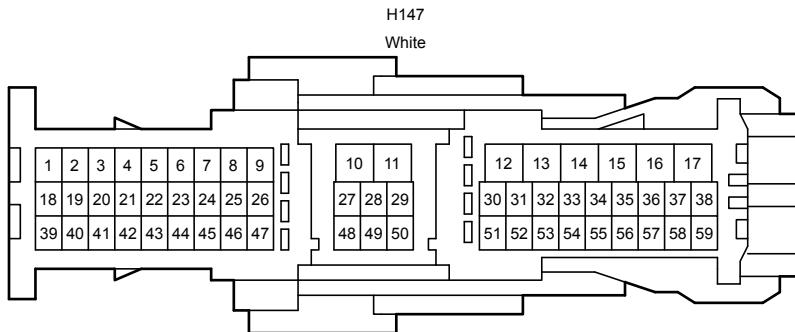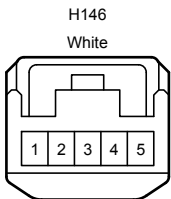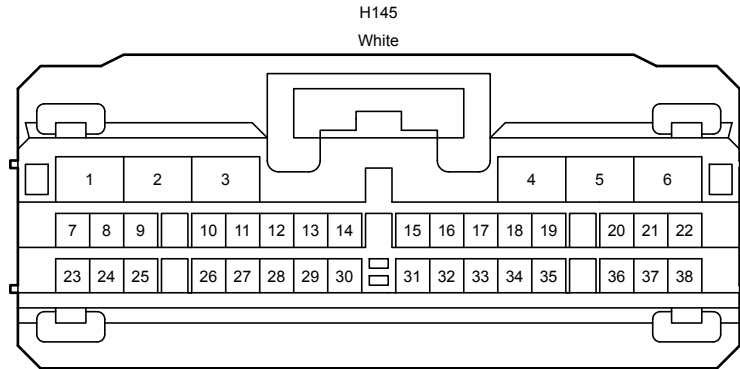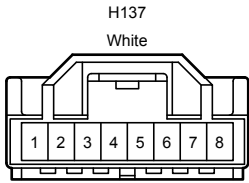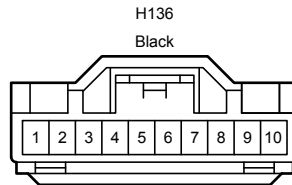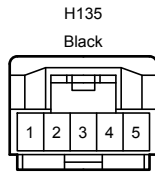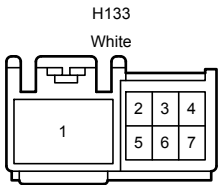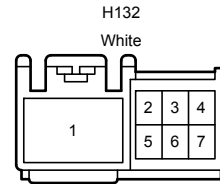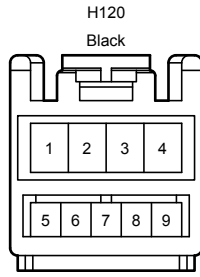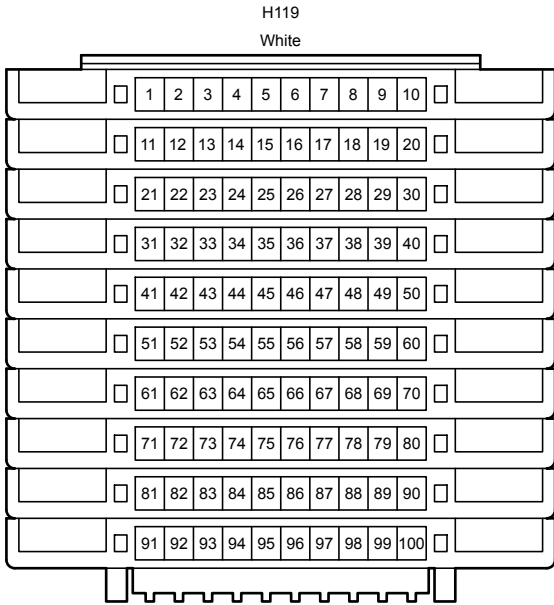

Position of Parts in Instrument Panel <LHD>

H148
White

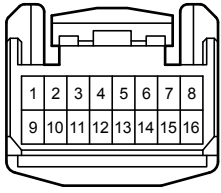

H149
White

