


Position of Parts in Instrument Panel <LHD>

\* 8:w/ Rear Pretensioner  
 \* 9:w/o Rear Pretensioner

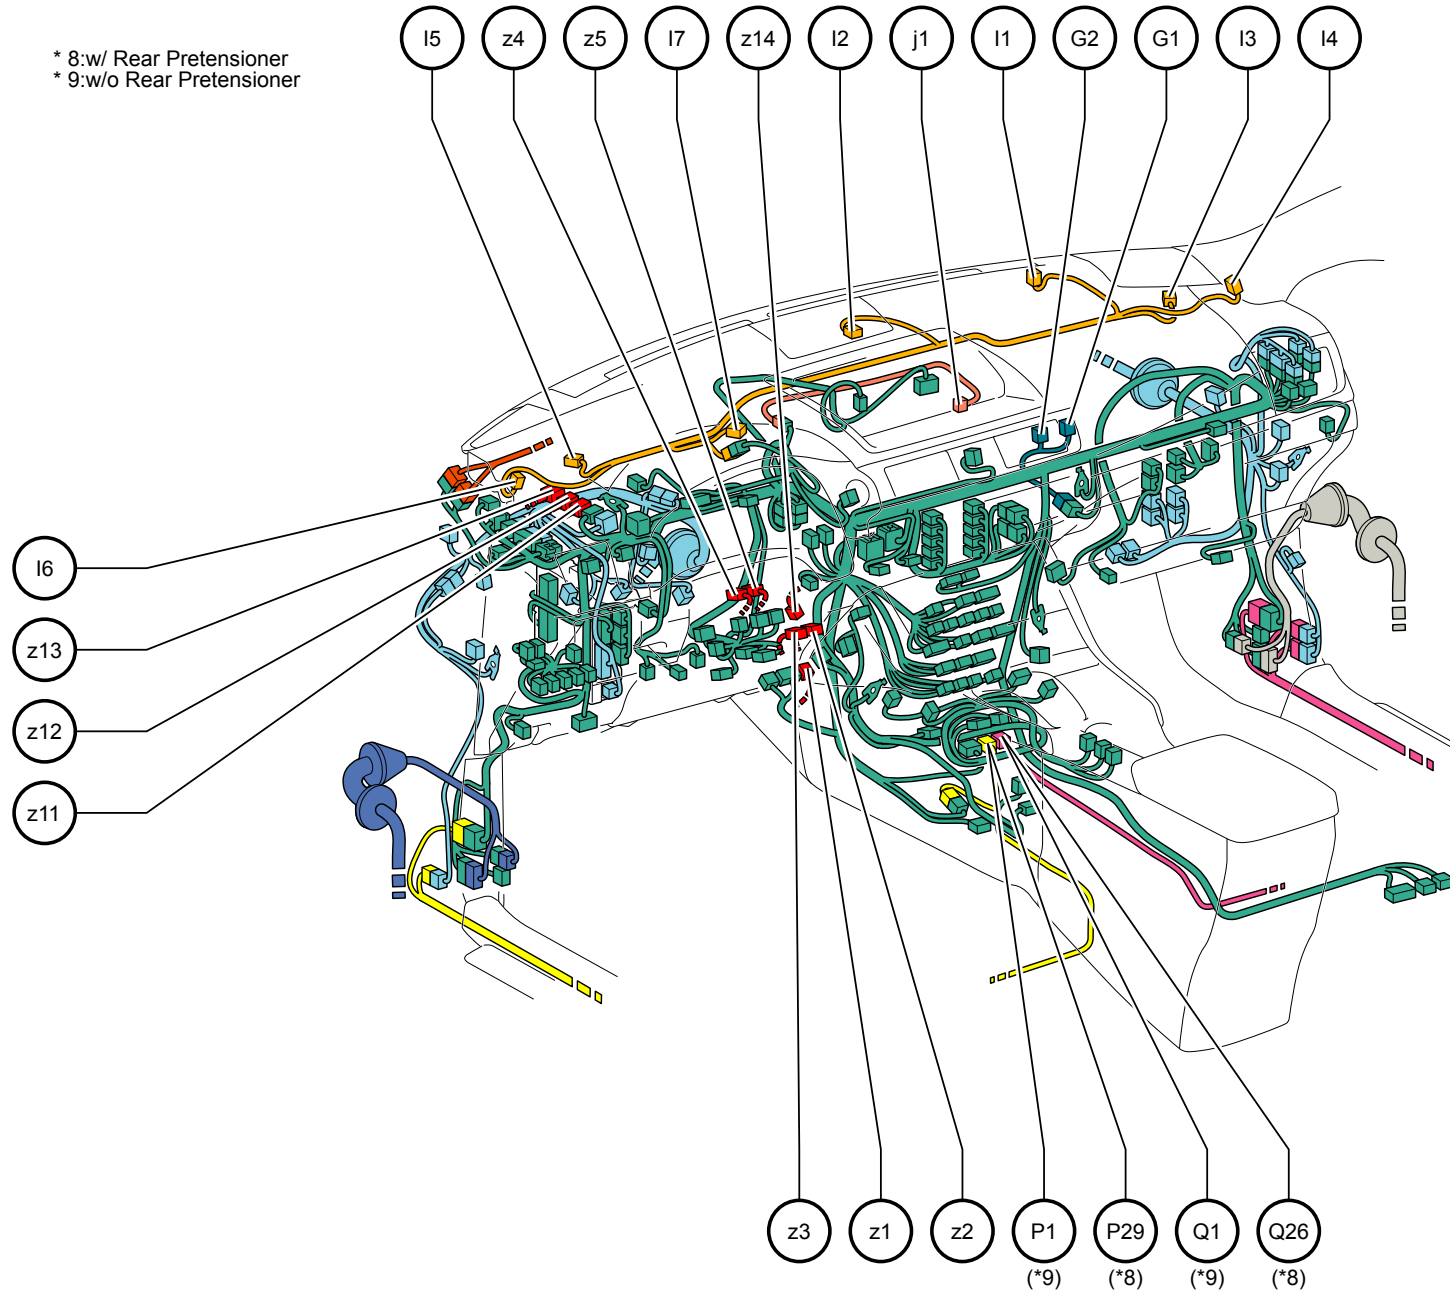

Position of Parts in Instrument Panel <LHD>

---

- G 1 Instrument Panel Passenger Airbag Assembly
- G 2 Instrument Panel Passenger Airbag Assembly
  
- I 1 Automatic Light Control Sensor
- I 2 Front No. 4 Speaker Assembly
- I 3 Front No. 2 Speaker Assembly RH
- I 4 Front No. 3 Speaker Assembly RH
- I 5 Front No. 2 Speaker Assembly LH
- I 6 Front No. 3 Speaker Assembly LH
- I 7 Junction Connector
  
- P 1 Airbag Sensor Assembly
- P 29 Airbag Sensor Assembly
  
- Q 1 Airbag Sensor Assembly
- Q 26 Airbag Sensor Assembly
  
- j 1 Power Outlet Socket Assembly
  
- z 1 A/C Amplifier Assembly , A/C Blower Assembly
- z 2 Driver Side Squib Circuit (Horn Button Assembly) , Spiral Cable Sub-Assembly
- z 3 Driver Side Squib Circuit (Horn Button Assembly) , Spiral Cable Sub-Assembly
- z 4 Spiral Cable Sub-Assembly , Steering Pad Switch Assembly
- z 5 Cruise Control Main Switch , Spiral Cable Sub-Assembly
- z 11 Power Steering ECU Assembly , Power Steering Torque Sensor
- z 12 Power Steering ECU Assembly , Power Steering Motor Assembly
- z 13 Power Steering ECU Assembly , Power Steering Motor Assembly
- z 14 Spiral Cable Sub-Assembly , Steering Wheel Heater Control Assembly

Position of Parts in Instrument Panel <LHD>

