

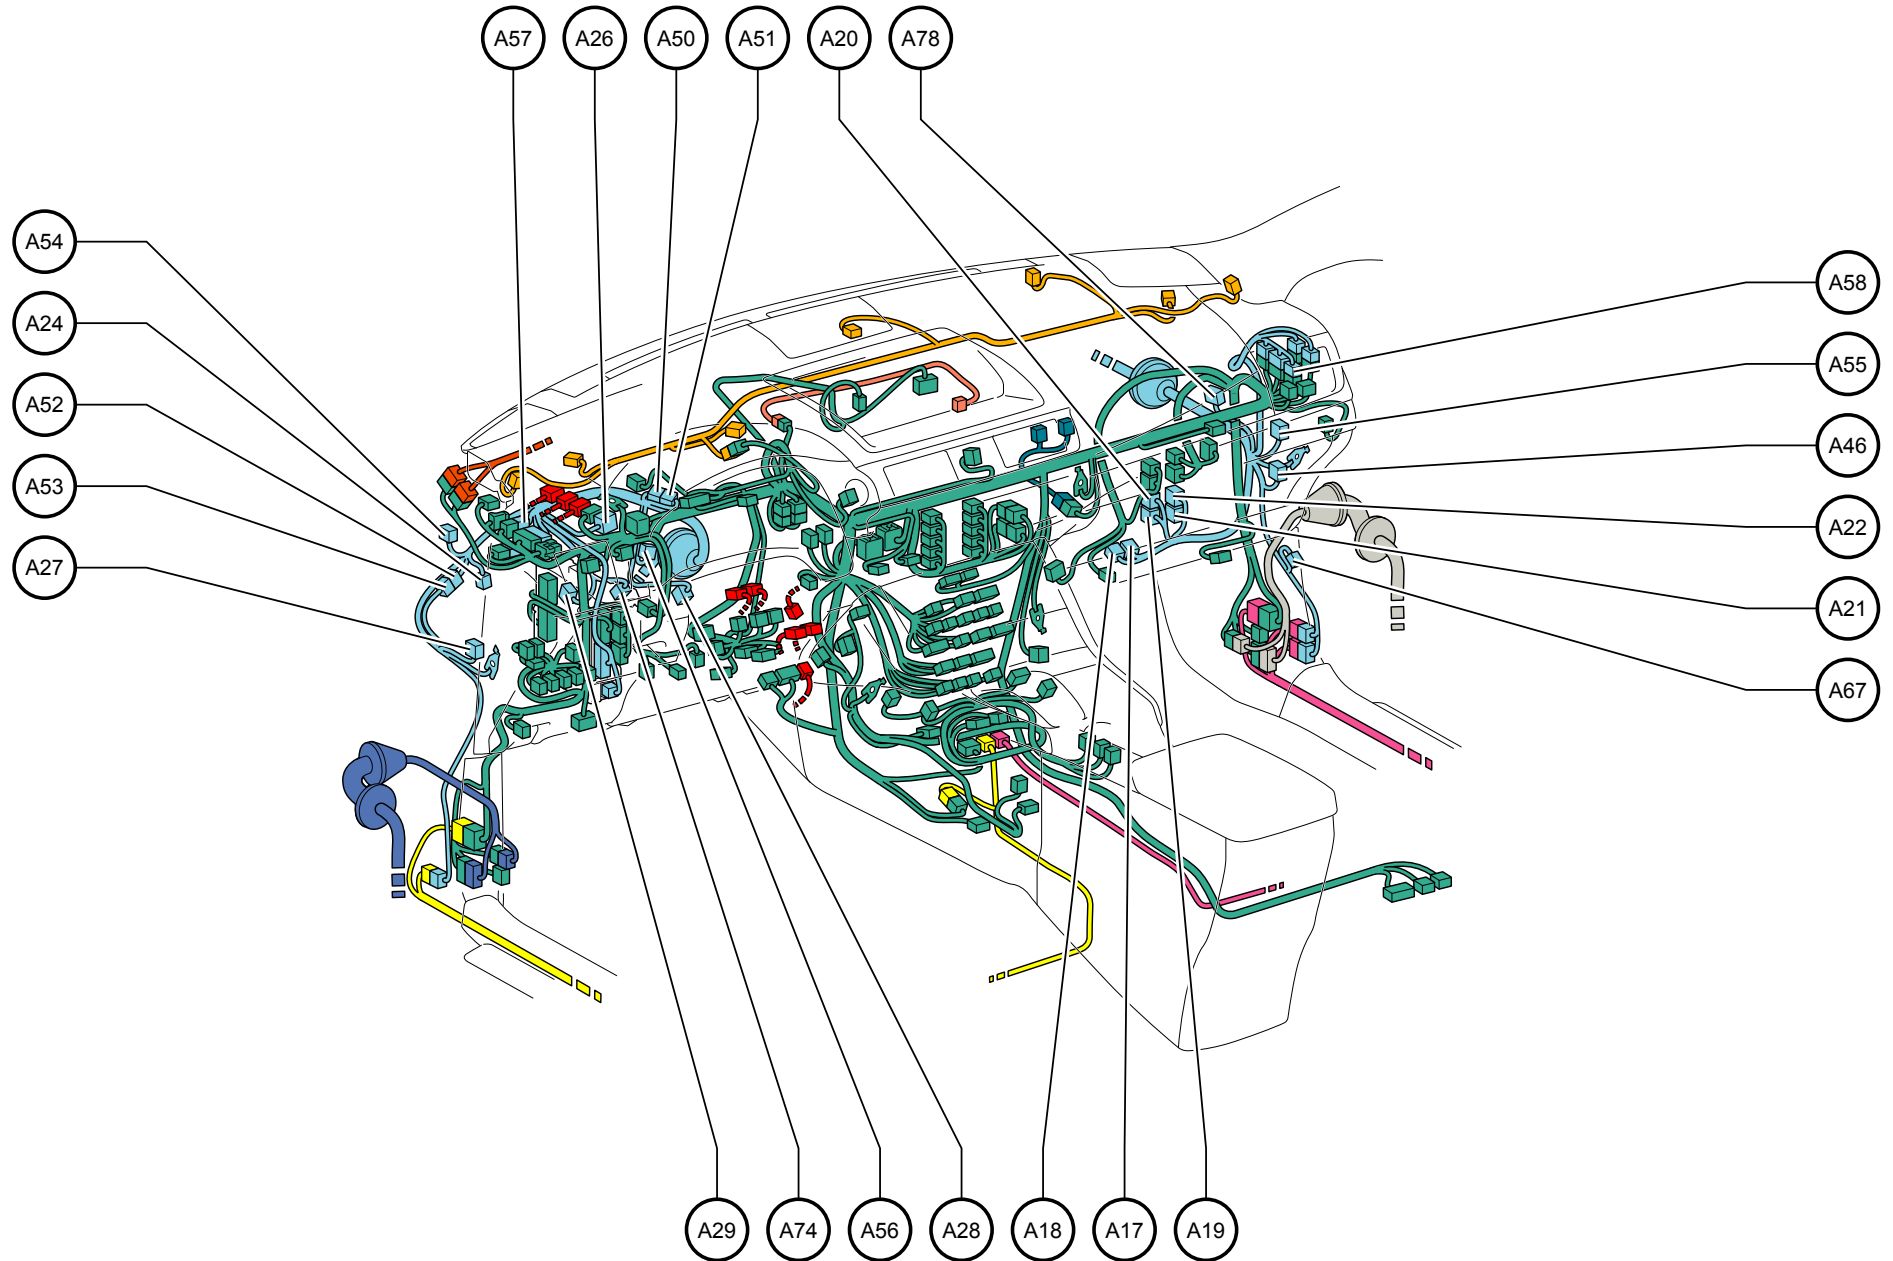
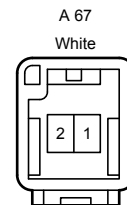
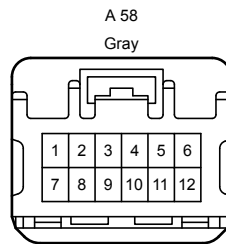
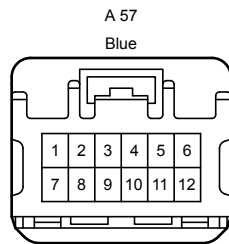
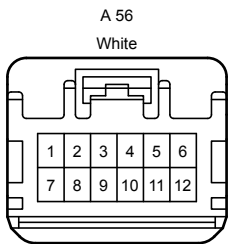
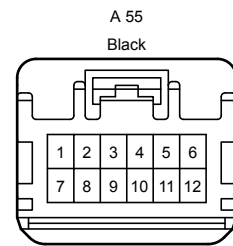
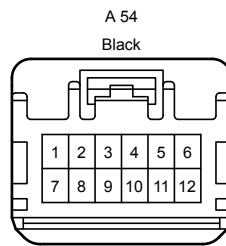
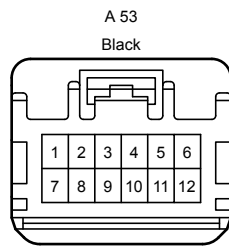
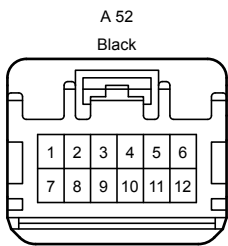
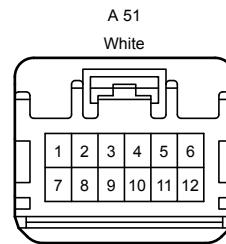
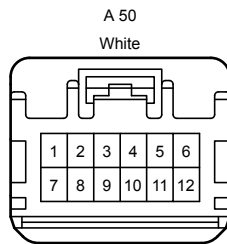
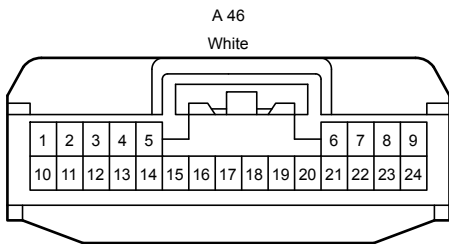
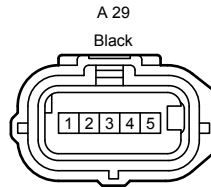
 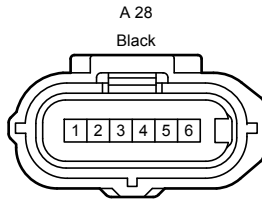
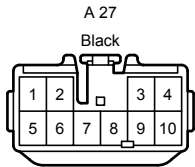

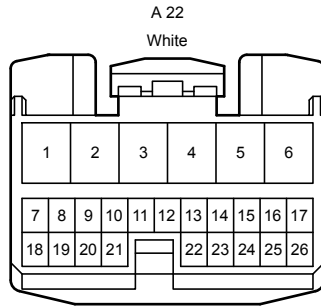
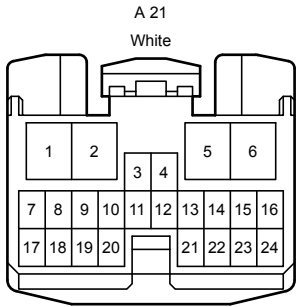
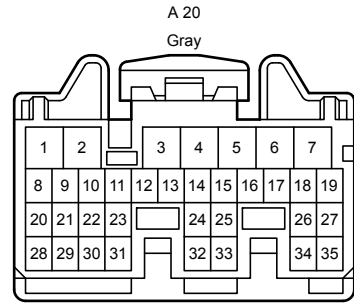
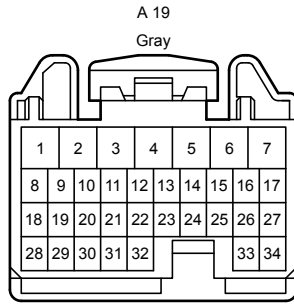


Position of Parts in Instrument Panel <LHD>

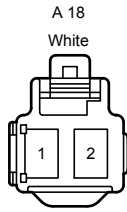

- A 17 Quick Heater Assembly
- A 18 Quick Heater Assembly
- A 19 Power Management Control ECU
- A 20 Power Management Control ECU
- A 21 Transmission Control ECU Assembly
- A 22 Transmission Control ECU Assembly
- A 24 Parking Brake Switch Assembly
- A 26 Power Steering ECU Assembly
- A 27 Stop Light Control ECU Assembly
- A 28 Accelerator Pedal Sensor Assembly
- A 29 Brake Pedal Stroke Sensor Assembly
- A 46 Headlight Leveling ECU Assembly
- A 50 Junction Connector
- A 51 Junction Connector
- A 52 Junction Connector
- A 53 Junction Connector
- A 54 Junction Connector
- A 55 Junction Connector
- A 56 Junction Connector
- A 57 Junction Connector
- A 58 Junction Connector
- A 67 Option Connector
- A 74 Stop Light Switch Assembly
- A 78 Clearance Warning ECU Assembly

Position of Parts in Instrument Panel <LHD>

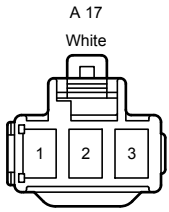

Position of Parts in Instrument Panel <LHD>

---

