


Position of Parts in Instrument Panel <LHD>

* 1: Refer to the Service Bulletin for the installation position of the parts.

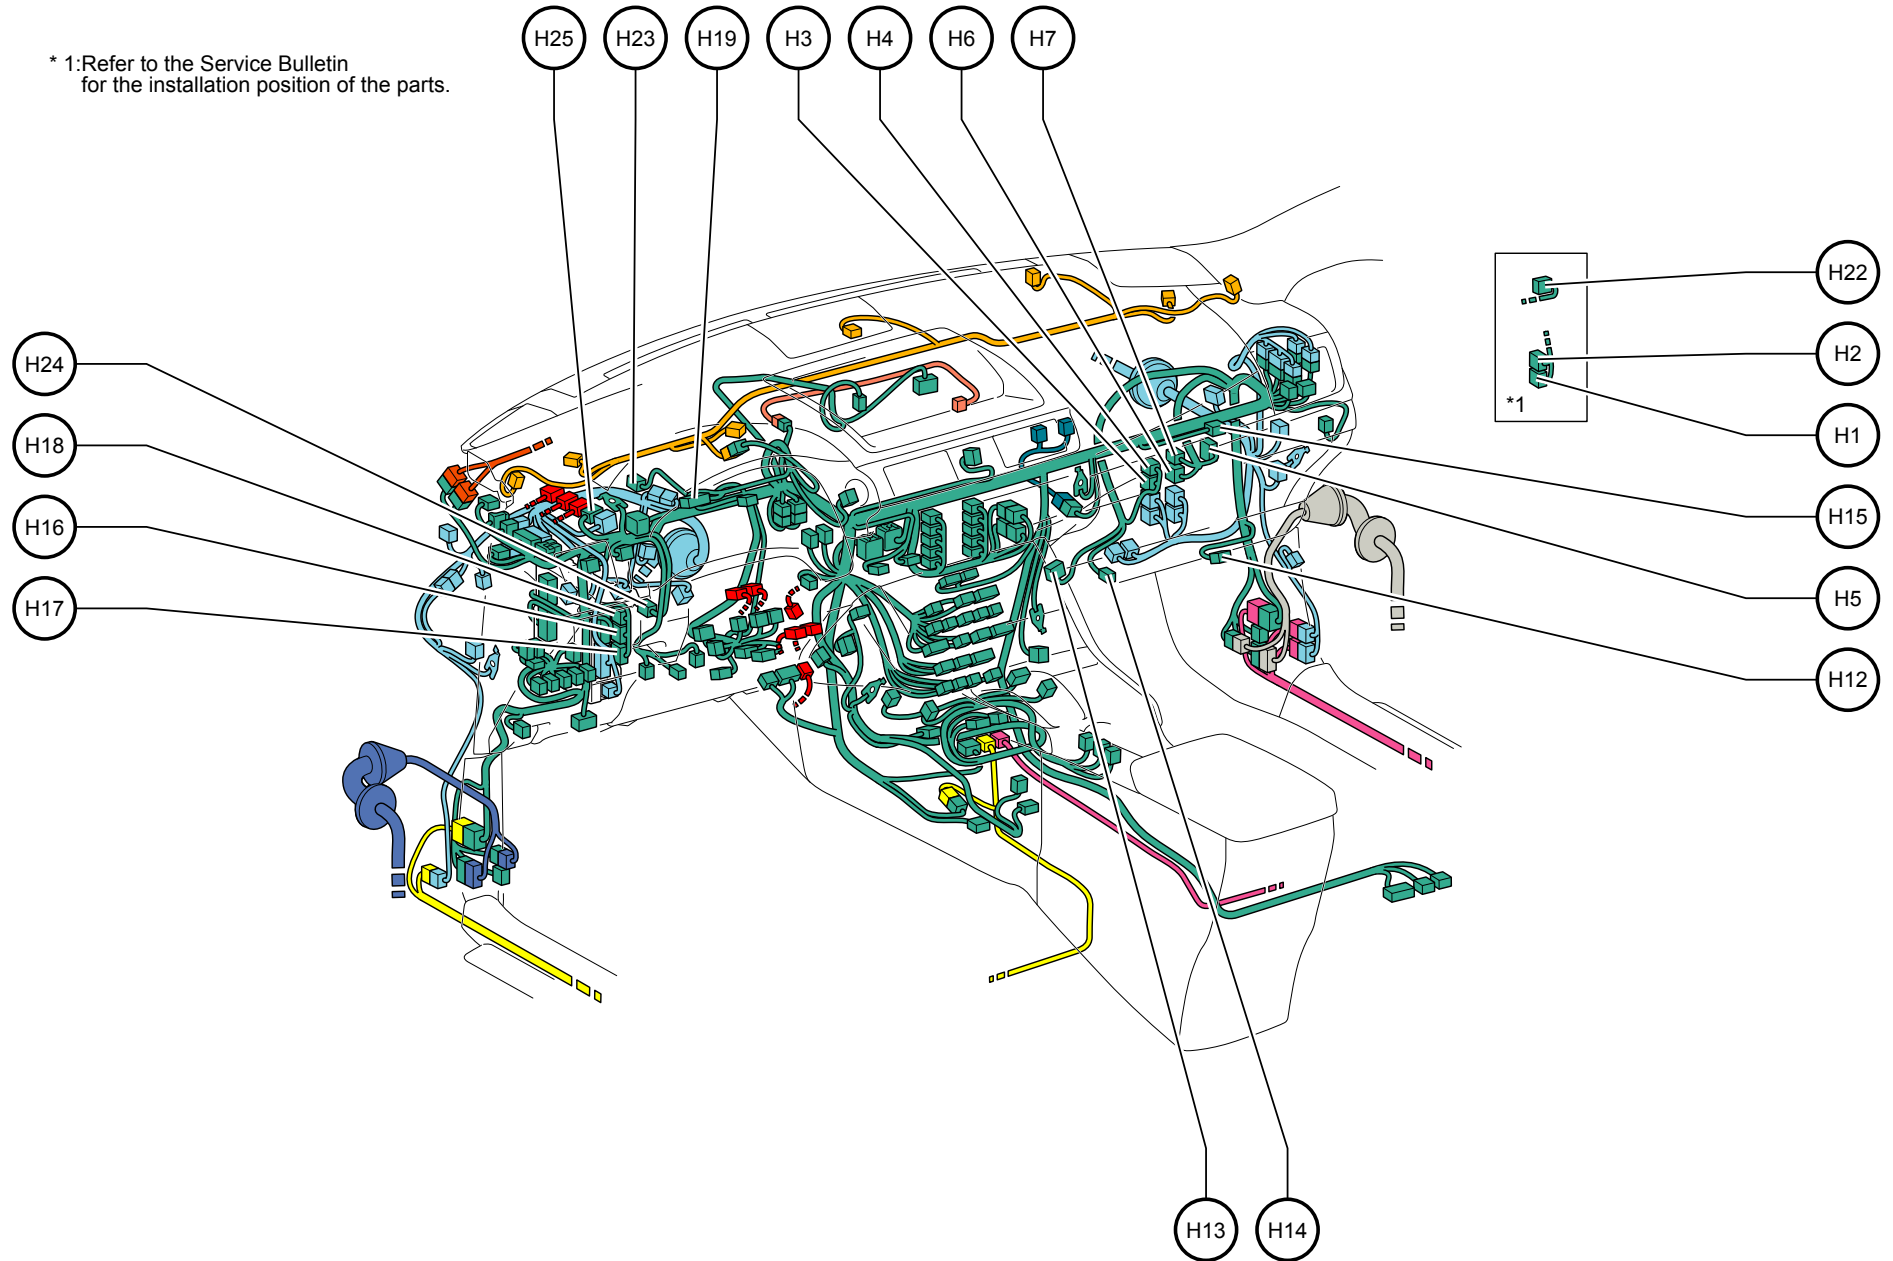


Position of Parts in Instrument Panel <LHD>


- H 1 Certification ECU Assembly
- H 2 Certification ECU Assembly
- H 3 Power Management Control ECU
- H 4 Power Management Control ECU
- H 5 Driving Support ECU Assembly
- H 6 Seat Belt Control ECU
- H 7 Seat Belt Control ECU
- H 12 Lower No. 2 Instrument Panel Airbag Assembly
- H 13 Blower with Fan Motor Sub-Assembly
- H 14 No. 1 Interior Illumination Light Assembly RH
- H 15 Glove Box Light Assembly
- H 16 Main Body ECU
- H 17 Main Body ECU
- H 18 Main Body ECU
- H 19 Combination Meter Assembly
- H 22 ID Code Box
- H 23 No. 1 Clearance Warning Buzzer
- H 24 Skid Control Buzzer Assembly
- H 25 Power Steering ECU Assembly

Position of Parts in Instrument Panel <LHD>


H 1
White

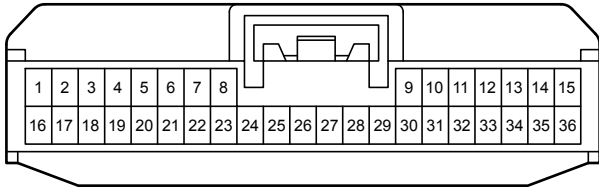


H 2
White

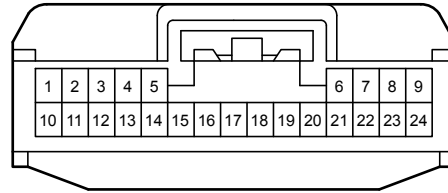


H 3
Gray

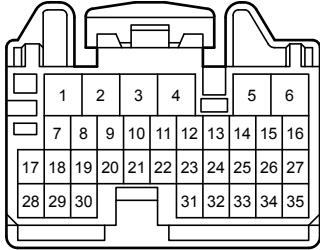


H 4
Gray

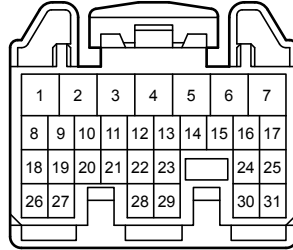


H 5
White

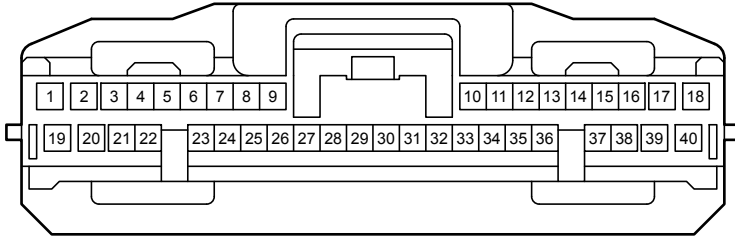


H 6
White

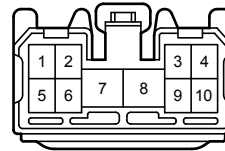


H 7
White

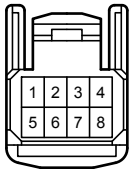

H 12
Yellow

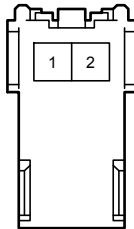

H 13
Black

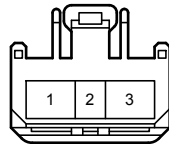


H 14
Gray



H 15
Gray




H 16
Black

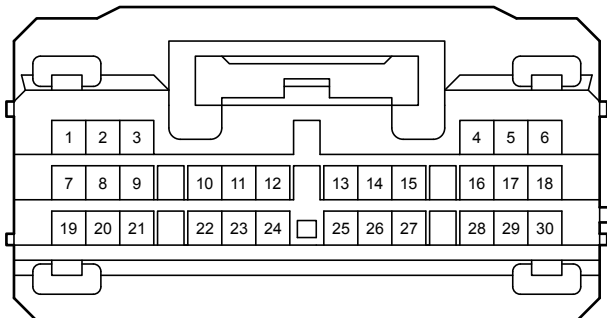


Position of Parts in Instrument Panel <LHD>


H 17
White

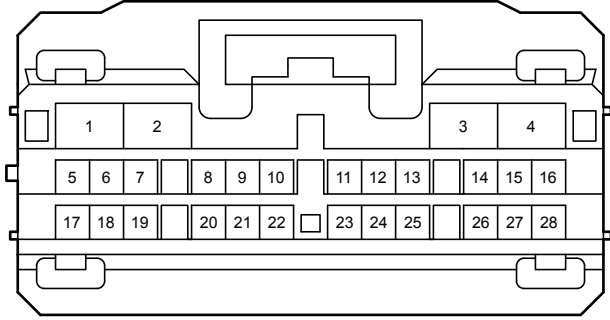


H 18
White

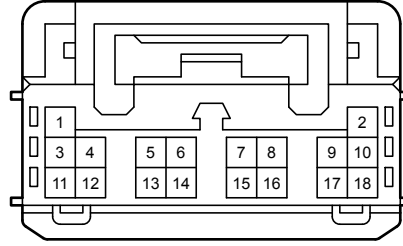


H 19
White

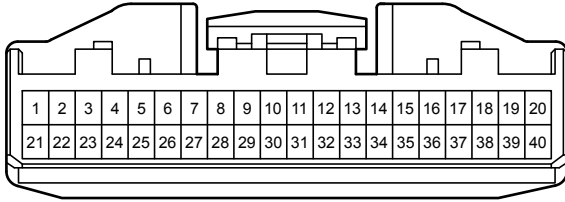


H 22
White

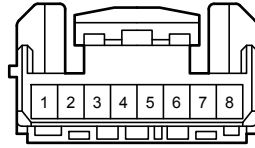

H 23
Black

 

H 24
Blue

 

H 25
White

