




















Position of Parts in Instrument Panel <LHD>

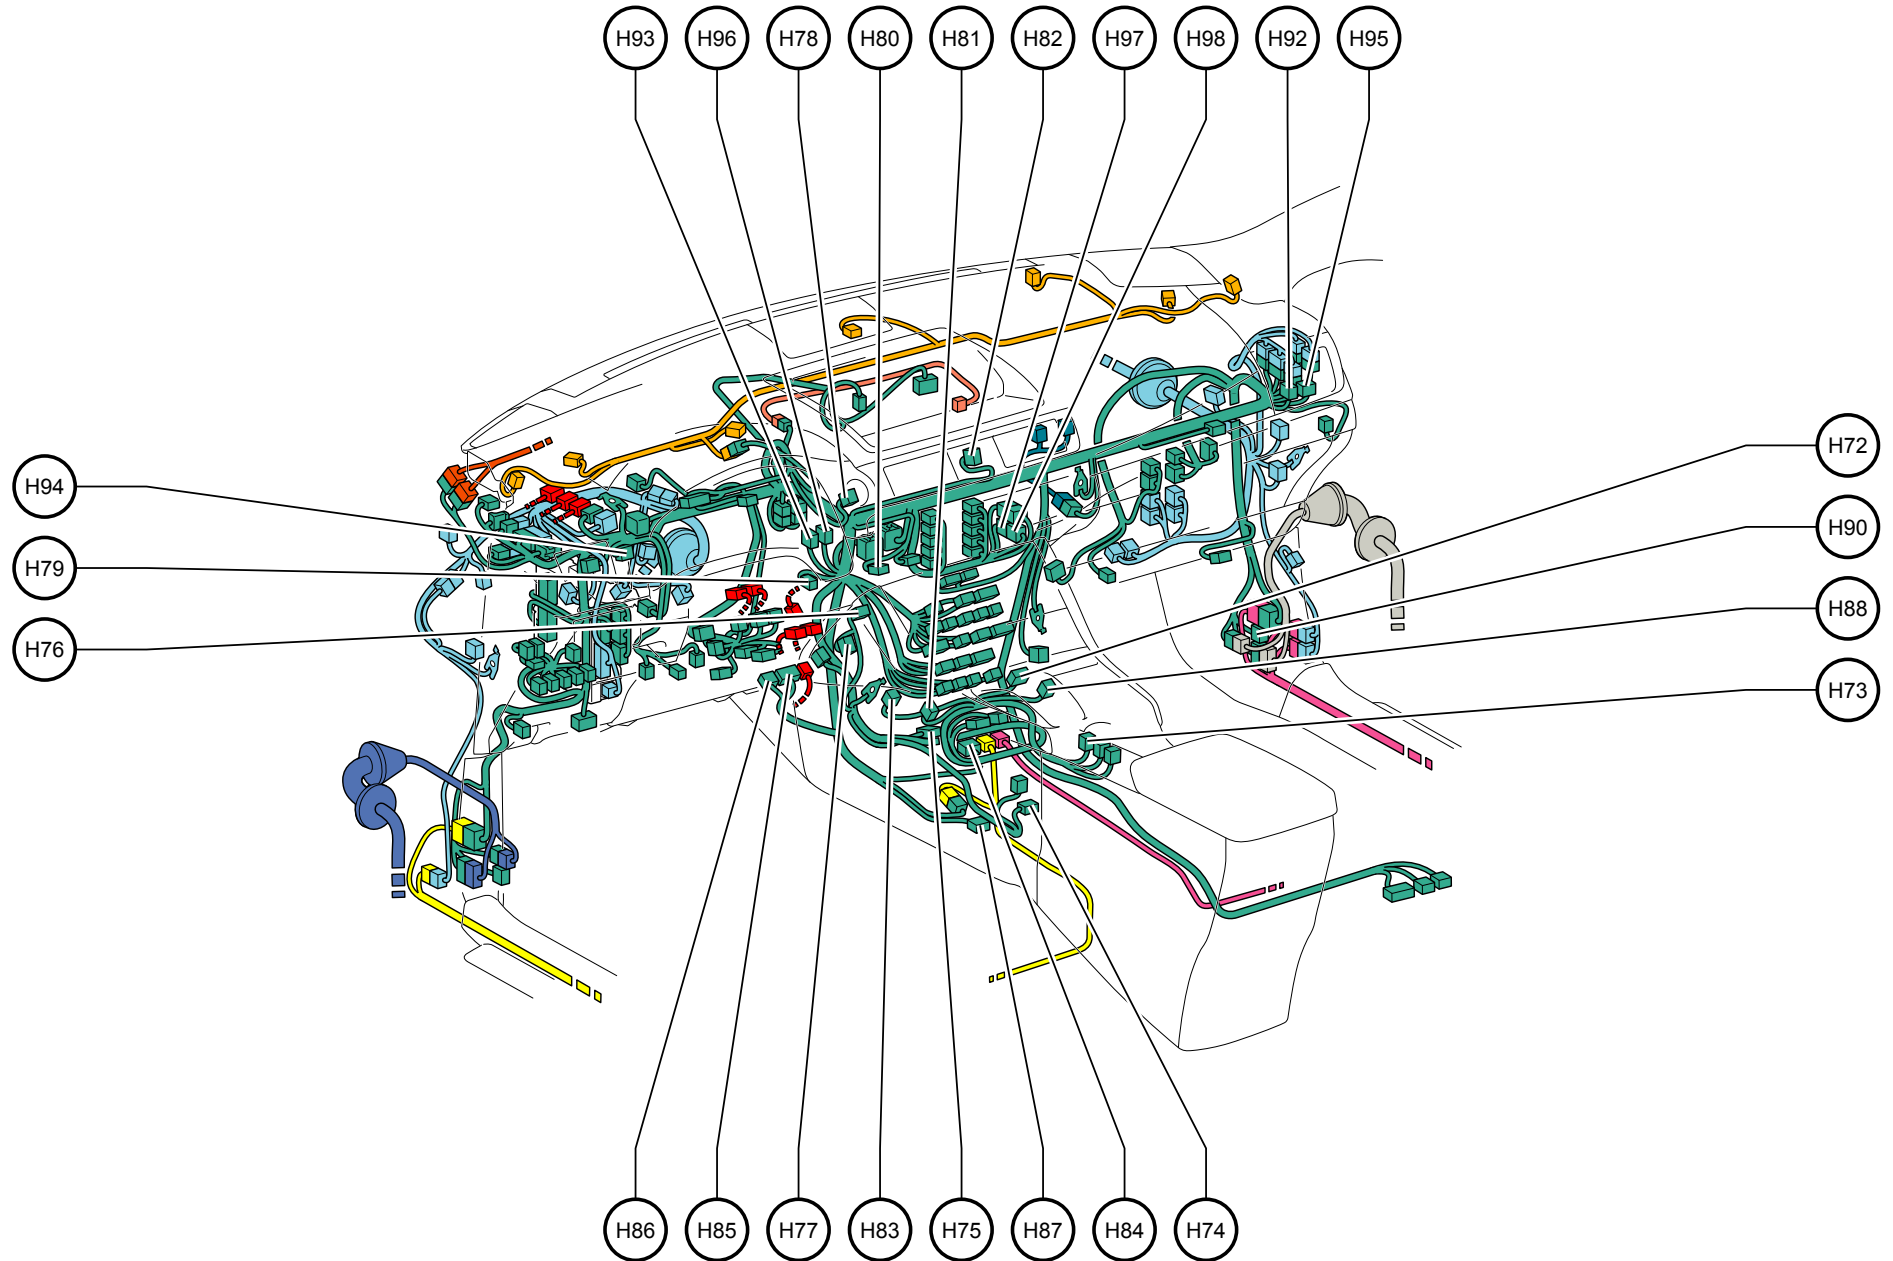

Position of Parts in Instrument Panel <LHD>


- H 72 Combination Switch Assembly
- H 73 Power Outlet Socket Assembly
- H 74 No. 1 Indoor Electrical Key Antenna Assembly
- H 75 Windshield Wiper Relay Assembly
- H 76 No. 1 Shift Lever Position Sensor
- H 77 No. 2 Shift Lever Position Sensor
- H 78 Power Switch
- H 79 Room Temperature Sensor
- H 80 A/C Control Assembly
- H 81 Transmission Shift Main Switch
- H 82 Hazard Warning Signal Switch Assembly
- H 83 Shift Indicator Light
- H 84 Airbag Sensor Assembly
- H 85 A/C Amplifier Assembly
- H 86 A/C Amplifier Assembly
- H 87 Yaw Rate Sensor
- H 88 Seat Heater Switch
- H 90 Option Connector
- H 92 Junction Connector
- H 93 Junction Connector
- H 94 Junction Connector
- H 95 Junction Connector
- H 96 Junction Connector
- H 97 Junction Connector
- H 98 Junction Connector

  Position of Parts in Instrument Panel <LHD>

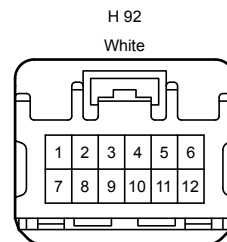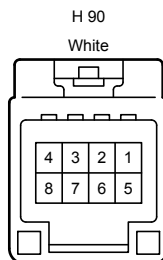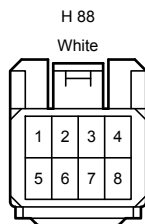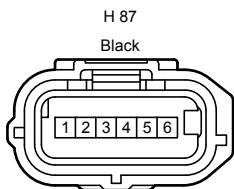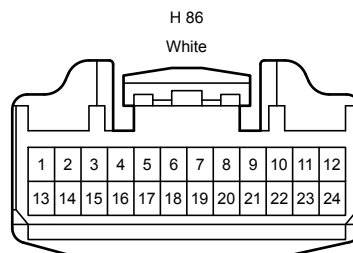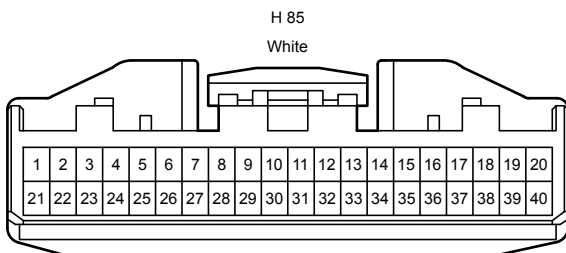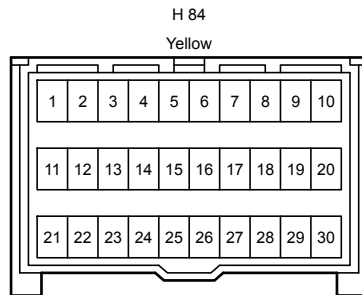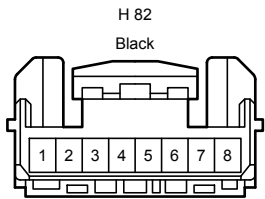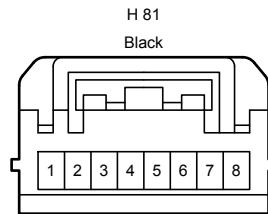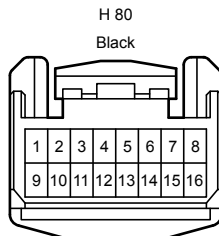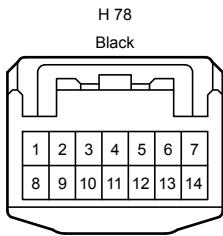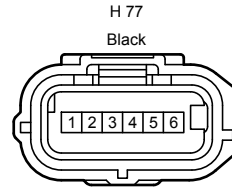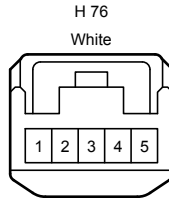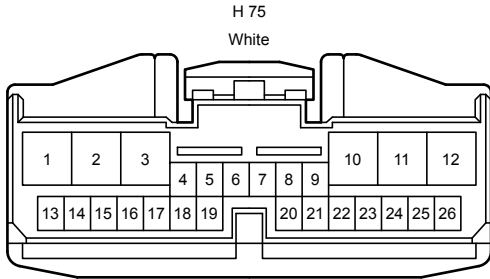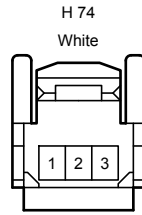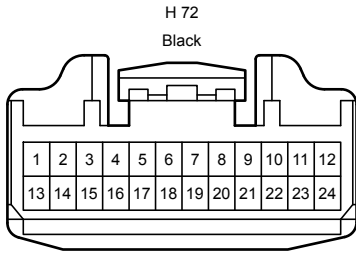


Position of Parts in Instrument Panel <LHD>


H 93
White

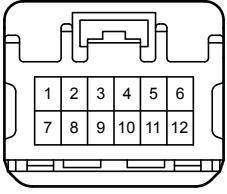


H 94
White

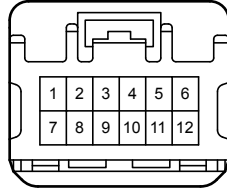


H 95
Gray

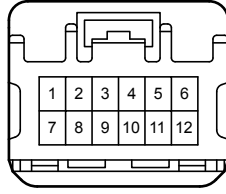

H 96
Gray

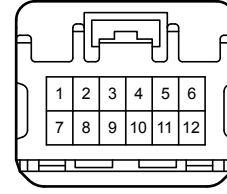

H 97
Black

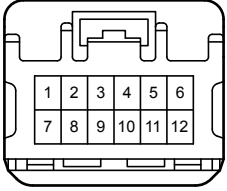

H 98
Black

