


Position of Parts in Instrument Panel <LHD>

\* 2:w/ Headlight Cleaner

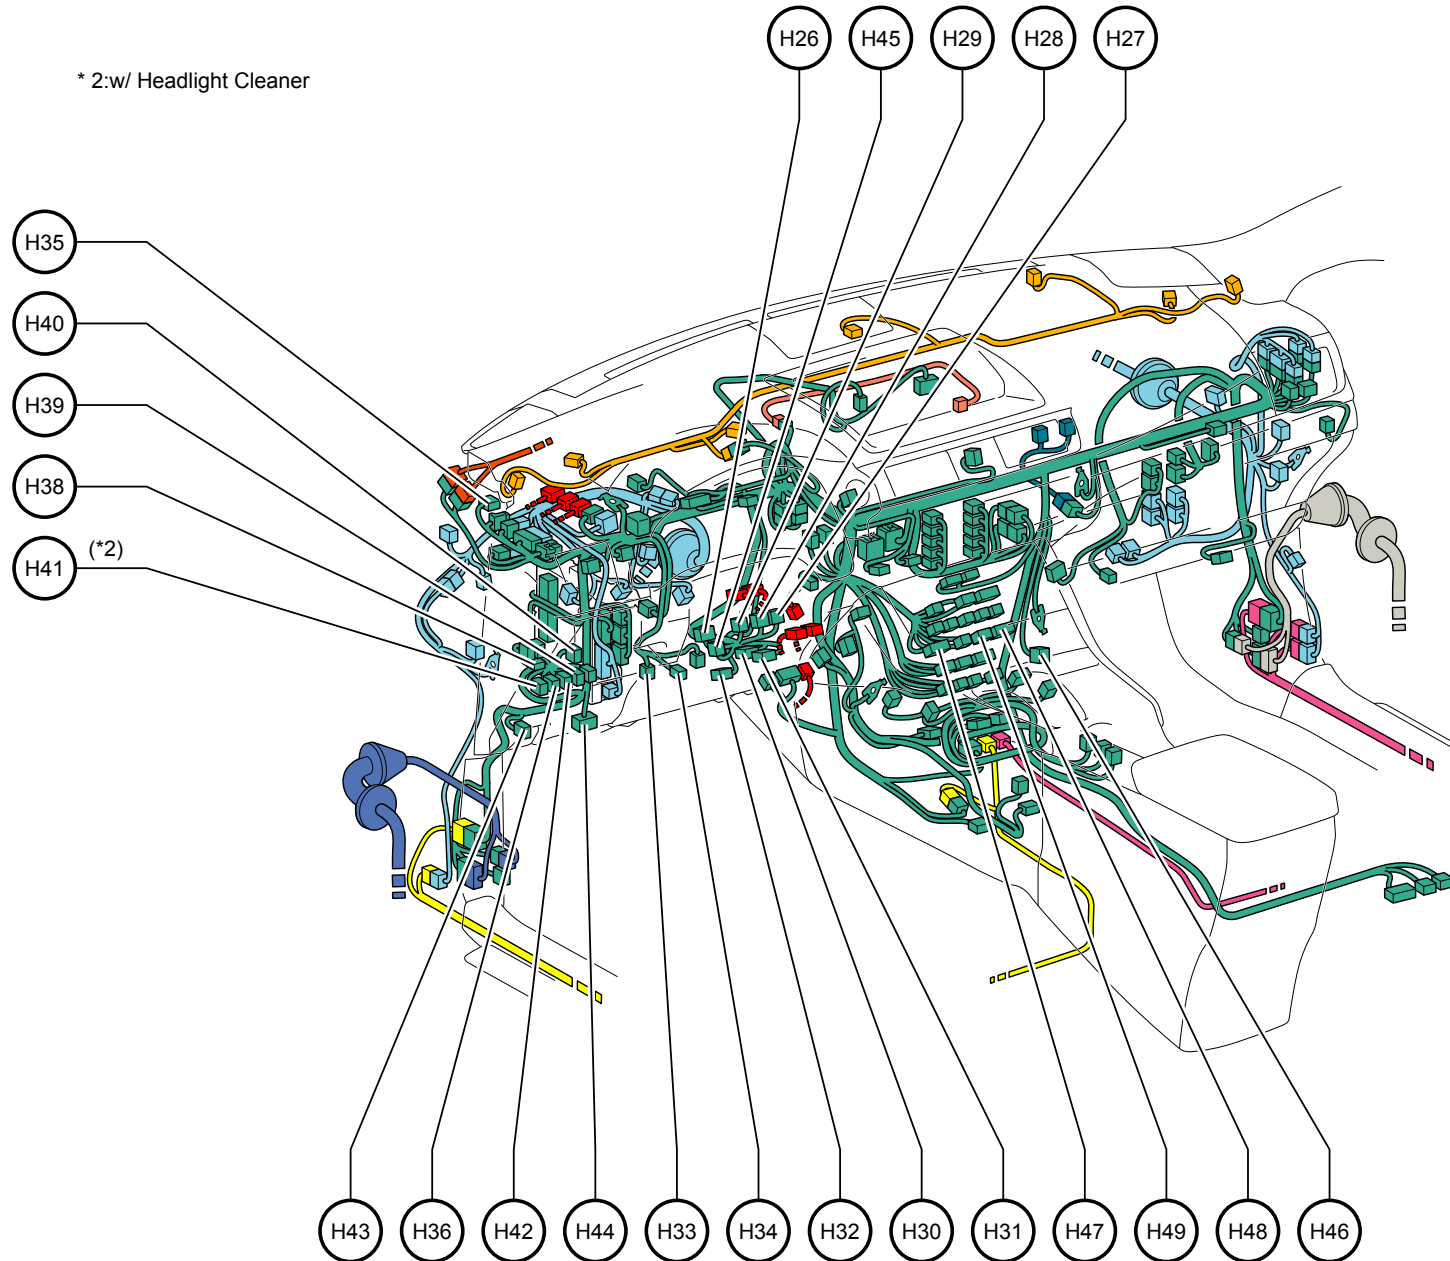

**Position of Parts in Instrument Panel <LHD>**

---

- H 26 Headlight Dimmer Switch Assembly
- H 27 Windshield Wiper Switch Assembly
- H 28 Windshield Wiper Switch Assembly
- H 29 Steering Sensor
- H 30 Spiral Cable Sub-Assembly
- H 31 Spiral Cable Sub-Assembly
- H 32 Lower No. 1 Instrument Panel Airbag Assembly
- H 33 Pre-Crash System Cancel Switch Assembly
- H 34 No. 1 Interior Illumination Light Assembly LH
- H 35 Turn Signal Flasher Assembly
- H 36 Outer Mirror Heater Switch Assembly
- H 38 Outer Mirror Switch Assembly
- H 39 Back Sonar or Clearance Sonar Switch Assembly
- H 40 Light Control Rheostat
- H 41 Headlight Cleaner Switch Assembly
- H 42 Steering Heater Switch
- H 43 Fuel Lid Opener Switch
- H 44 DLC3
- H 45 Spiral Cable Sub-Assembly
- H 46 Radio Setting Condenser
- H 47 Radio Receiver Assembly
- H 48 Radio Receiver Assembly
- H 49 Radio Receiver Assembly

Position of Parts in Instrument Panel <LHD>

