 




























Position of Parts in Seat <LHD Front Seat>

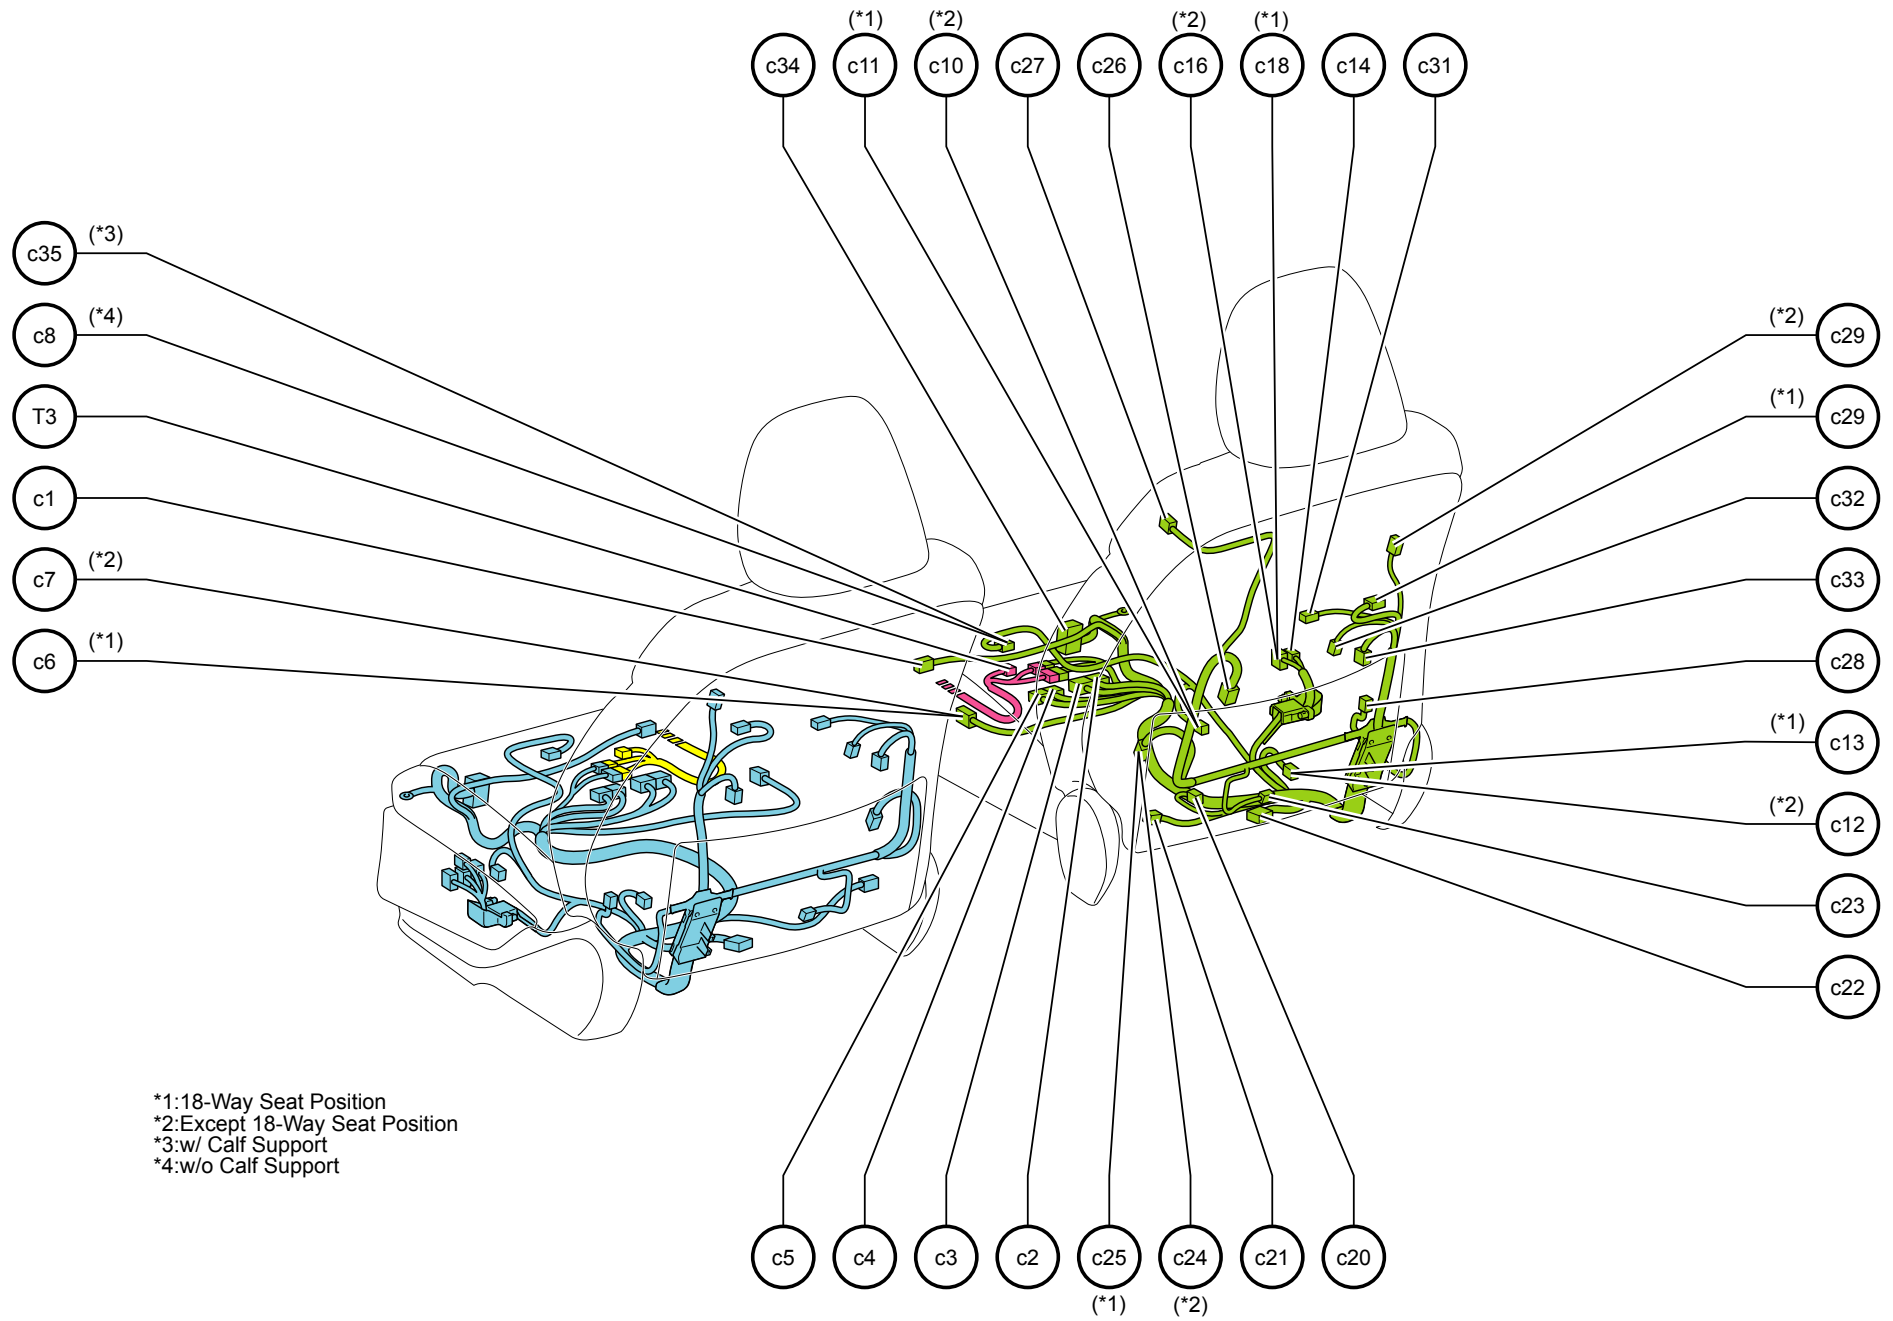

- \*1:18-Way Seat Position
- \*2:Except 18-Way Seat Position
- \*3:w/ Calf Support
- \*4:w/o Calf Support

- T 3 Front Seat Inner Belt Assembly RH
  
- c 1 Front Seat Inner Belt Assembly RH
- c 2 Position Control ECU Assembly RH
- c 3 Position Control ECU Assembly RH
- c 4 Position Control ECU Assembly RH
- c 5 Position Control ECU Assembly RH
- c 6 Power Seat Slide Motor RH
- c 7 Power Seat Slide Motor RH
- c 8 Power Seat Cushion Motor RH
- c 10 Power Seat Tilt Motor RH
- c 11 Power Seat Tilt Motor RH
- c 12 Power Seat Lift Motor RH
- c 13 Power Seat Lift Motor RH
- c 14 Front Lumbar Power Seat Switch RH
- c 16 Front Power Seat Switch Assembly RH
- c 18 Front Power Seat Switch Assembly RH
- c 20 Occupant Detection Sensor RH (Separate Type Front Seat Cushion Pad)
- c 21 Seat Climate Control Blower RH
- c 22 Front Seat Heater Assembly RH
- c 23 Rear Foot Light RH (No. 1 Interior Illumination Light Assembly RH)
- c 24 Power Seat Reclining Motor RH
- c 25 Power Seat Reclining Motor RH
- c 26 Lumbar Support Motor RH
- c 27 Slide and Reclining Switch RH (Power Seat Switch Assembly)
- c 28 Power Seat Side Support Motor RH
- c 29 Front Seat Airbag Assembly RH
- c 31 Power Seat Shoulder Support Motor RH
- c 32 Seat Back Climate Control Blower RH
- c 33 Power Seat Pelvic Support Motor RH
- c 34 Junction Connector
- c 35 Power Seat Calf Support Motor RH

                          Position of Parts in Seat <LHD Front Seat>

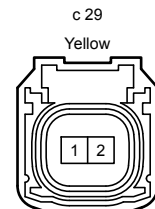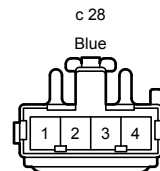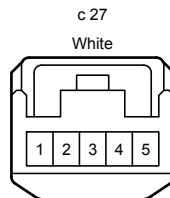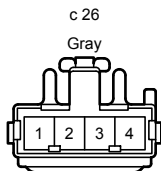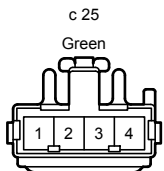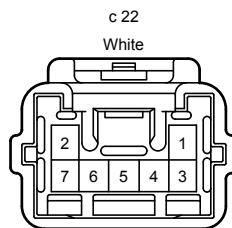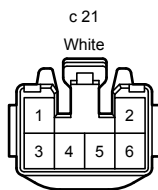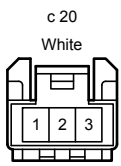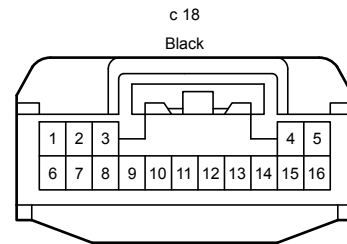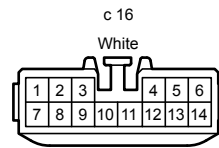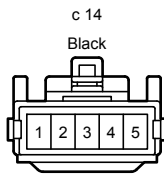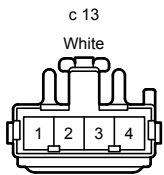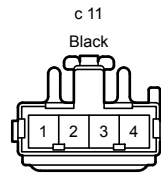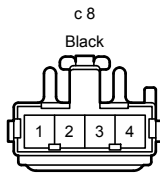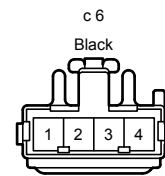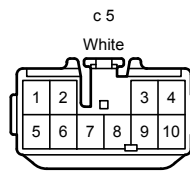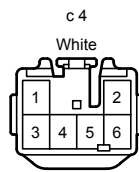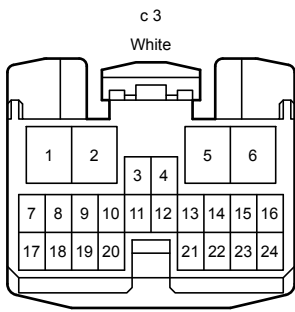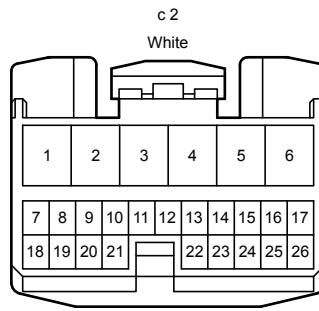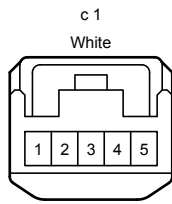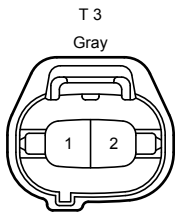

Position of Parts in Seat <LHD Front Seat>

---

