


Position of Parts in Seat <RHD Front Seat>

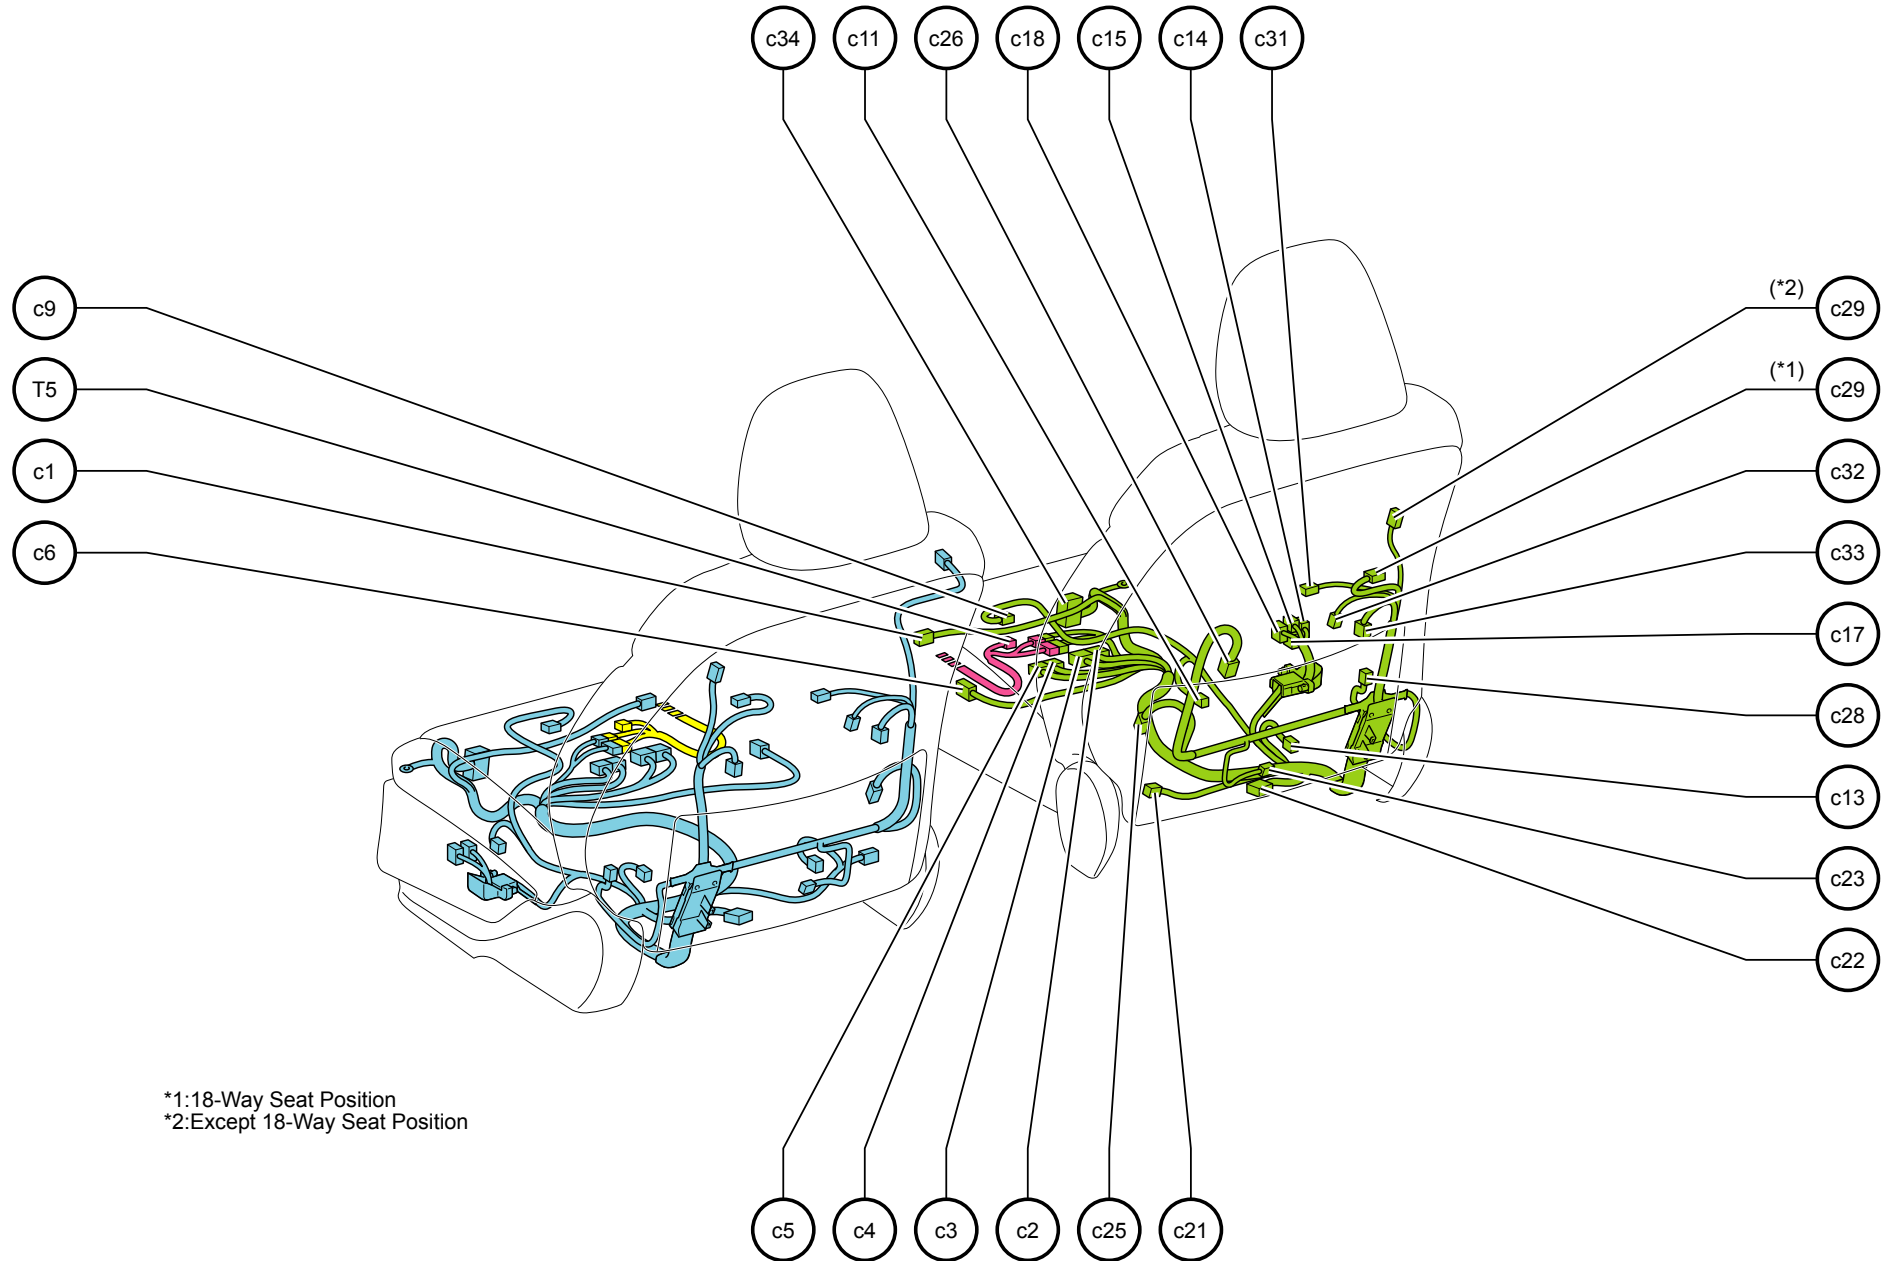

*1:18-Way Seat Position
*2:Except 18-Way Seat Position

- T 5 Front Seat Inner Belt Assembly RH

- c 1 Front Seat Inner Belt Assembly RH
- c 2 Position Control ECU Assembly RH
- c 3 Position Control ECU Assembly RH
- c 4 Position Control ECU Assembly RH
- c 5 Position Control ECU Assembly RH
- c 6 Power Seat Slide Motor RH
- c 9 Power Seat Cushion Motor RH
- c 11 Power Seat Tilt Motor RH
- c 13 Power Seat Lift Motor RH
- c 14 Front Lumbar Power Seat Switch RH
- c 15 Power Seat Switch Assembly RH
- c 17 Power Seat Switch Assembly RH
- c 18 Front Power Seat Switch Assembly RH
- c 21 Seat Climate Control Blower RH
- c 22 Front Seat Heater Assembly RH
- c 23 Rear Foot Light RH (No. 1 Interior Illumination Light Assembly RH)
- c 25 Power Seat Reclining Motor RH
- c 26 Lumbar Support Motor RH
- c 28 Power Seat Side Support Motor RH
- c 29 Front Seat Airbag Assembly RH
- c 31 Power Seat Shoulder Support Motor RH
- c 32 Seat Back Climate Control Blower RH
- c 33 Power Seat Pelvic Support Motor RH
- c 34 Junction Connector

Position of Parts in Seat <RHD Front Seat>

