













Position of Parts in Engine Compartment <LHD 2AR-FSE>

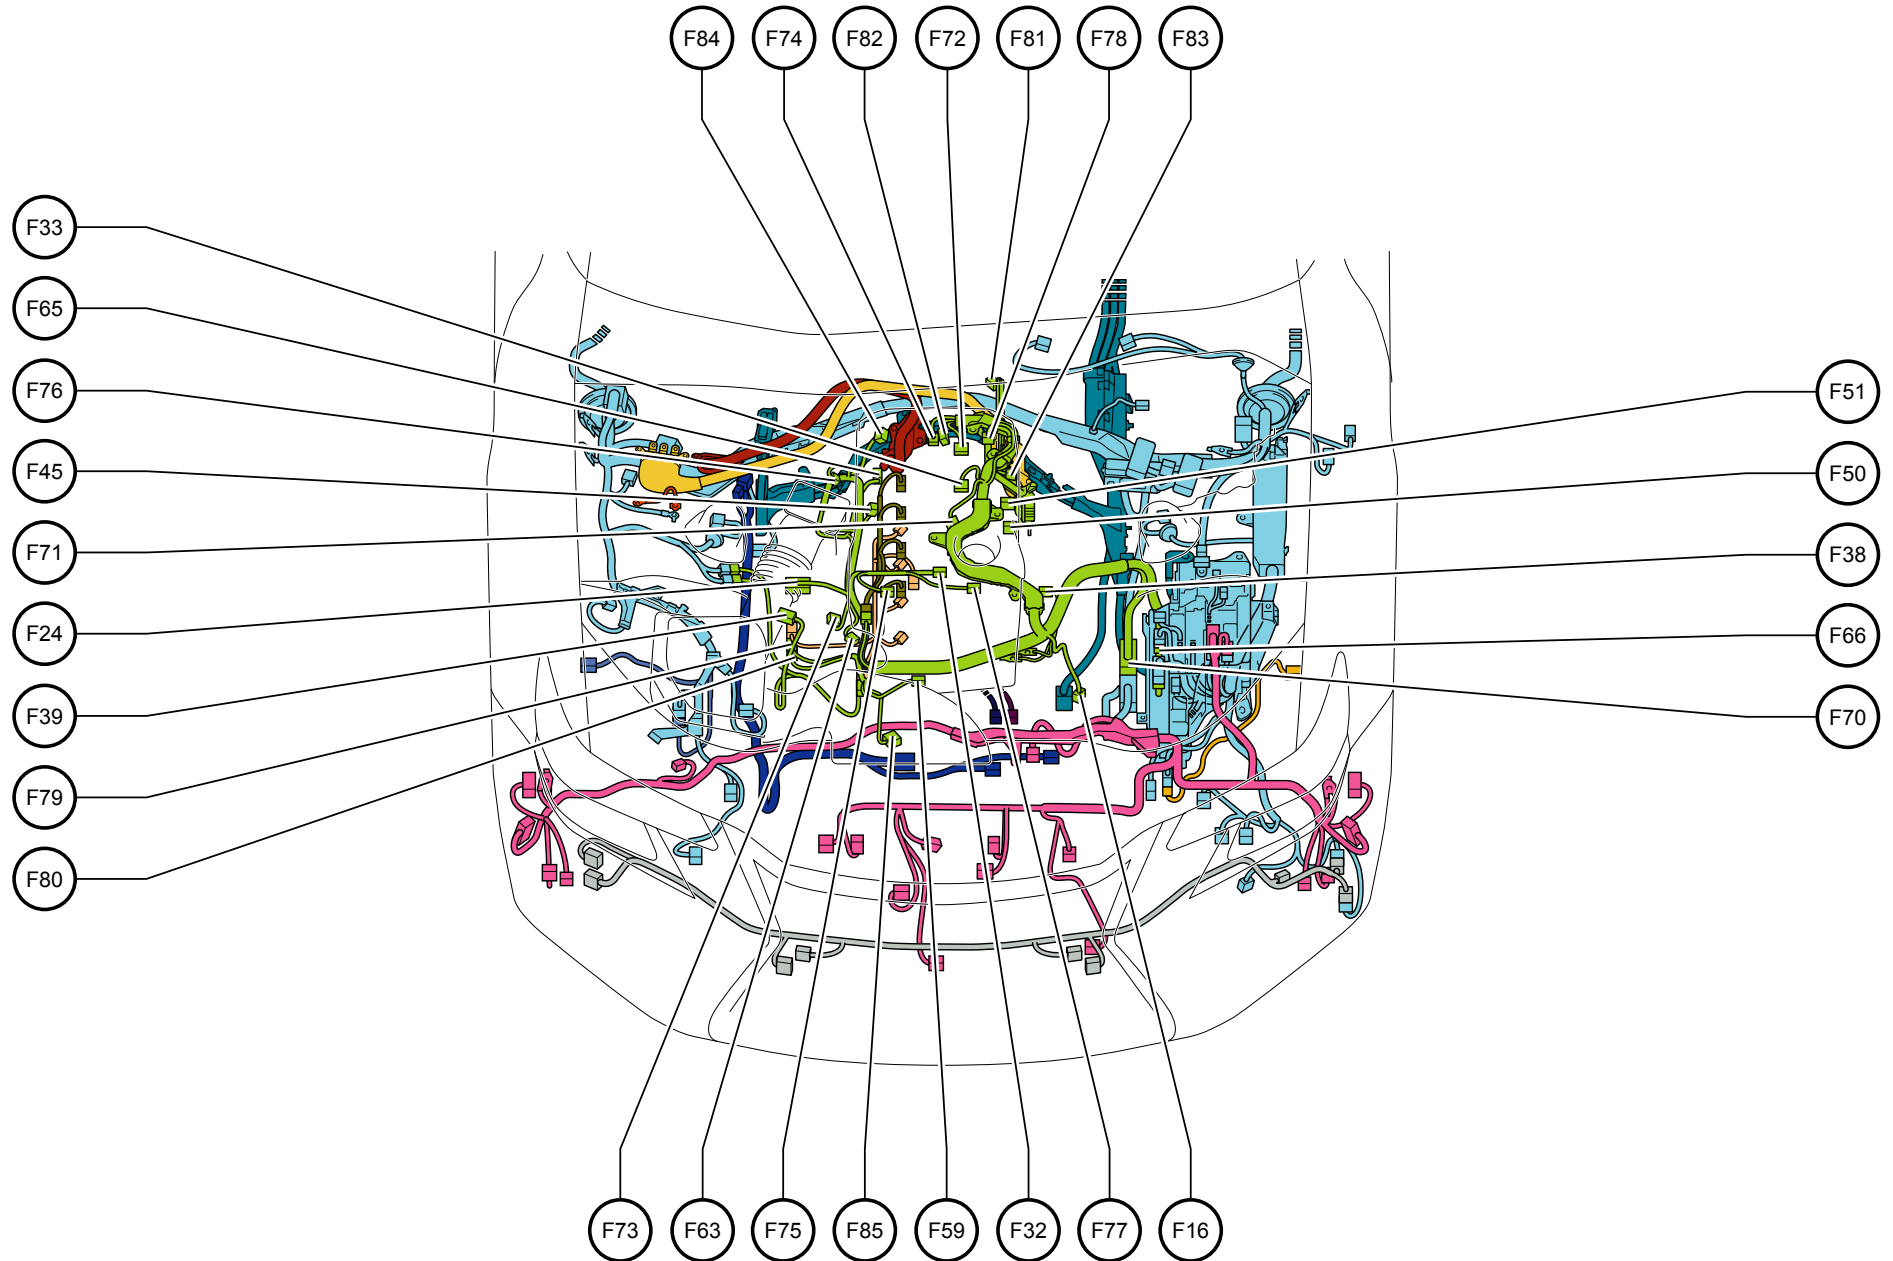





Position of Parts in Engine Compartment <LHD 2AR-FSE>

- F 16 Compressor with Motor Assembly
- F 24 Throttle Body with Motor Assembly
- F 32 Ignition Coil Assembly No. 1
- F 33 Ignition Coil Assembly No. 3
- F 38 Engine Oil Pressure Switch Assembly
- F 39 Intake Mass Air Flow Meter Sub-Assembly
- F 45 Fuel Pressure Sensor
- F 50 Hybrid Vehicle Transmission Assembly
- F 51 Hybrid Vehicle Transmission Assembly
- F 59 E.F.I. Engine Coolant Temperature Sensor
- F 63 Engine Oil Level Sensor
- F 65 Shift Lever Position Sensor
- F 66 Junction Connector
- F 70 ECM
- F 71 Ignition Coil Assembly No. 2
- F 72 Ignition Coil Assembly No. 4
- F 73 E.F.I. Vacuum Sensor Assembly
- F 74 VVT Sensor (Bank 1 Intake Side)
- F 75 Cam Timing Oil Control Valve Assembly (Bank 1 Intake Side)
- F 76 Purge VSV
- F 77 Cam Timing Oil Control Valve Assembly (Bank 1 Exhaust Side)
- F 78 VVT Sensor (Bank 1 Exhaust Side)
- F 79 Injector Driver
- F 80 Injector Driver
- F 81 Oxygen Sensor (Bank 1 Sensor 2)
- F 82 Fuel Pump Assembly
- F 83 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- F 84 EGR Valve Assembly
- F 85 Crank Position Sensor

Position of Parts in Engine Compartment <LHD 2AR-FSE>

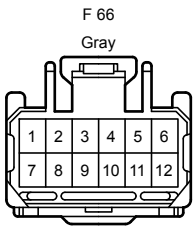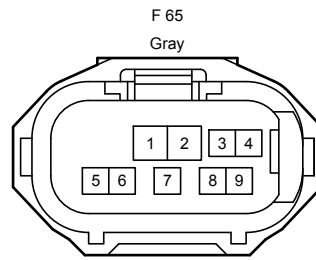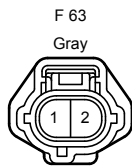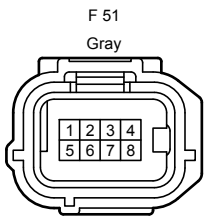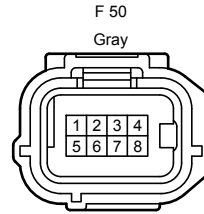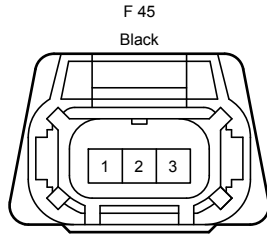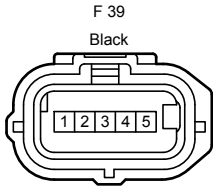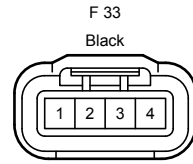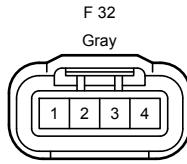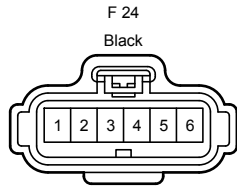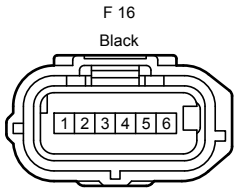

F 70
Black

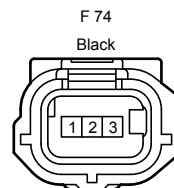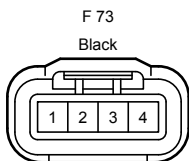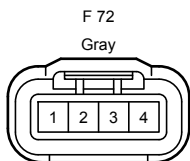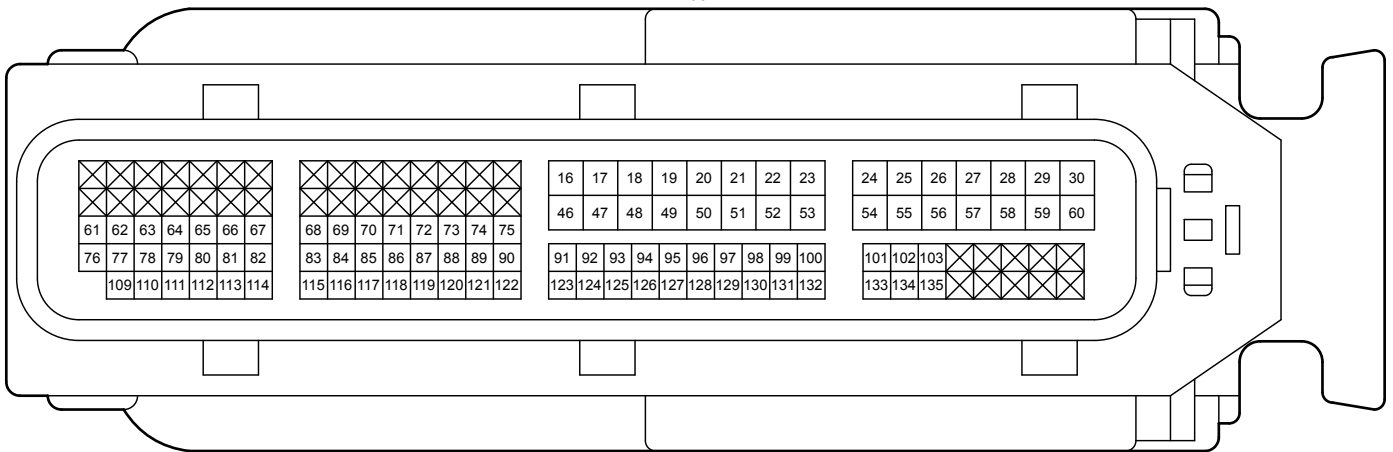

Position of Parts in Engine Compartment <LHD 2AR-FSE>

