


Position of Parts in Engine Compartment <LHD 2AR-FSE>

* 1: Before Oct. 2015 Production
* 2: From Oct. 2015 Production

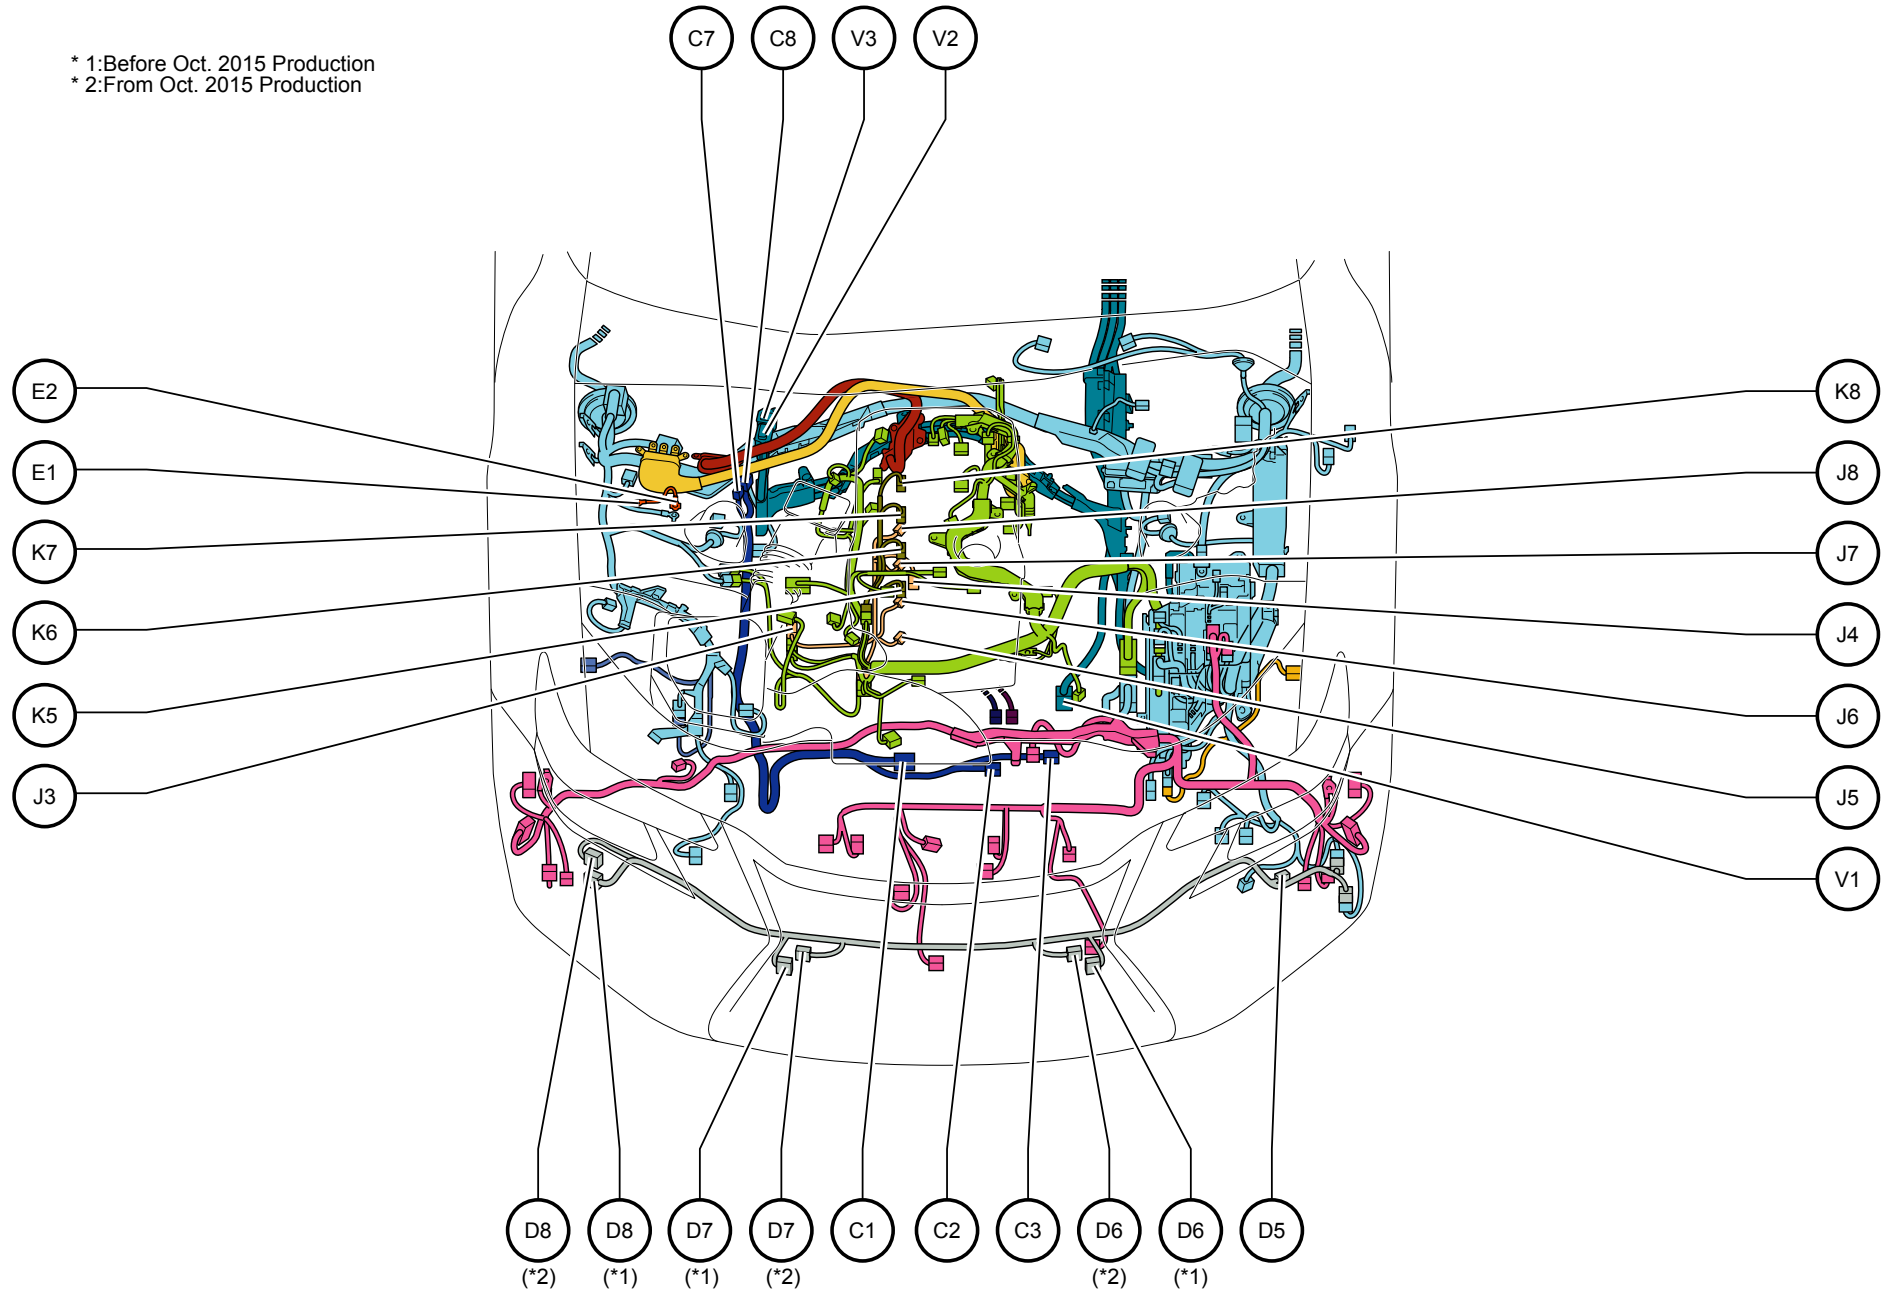

Position of Parts in Engine Compartment <LHD 2AR-FSE>

- C 1 Power Steering Motor (Power Steering Link Assembly)
- C 2 Power Steering Motor (Power Steering Link Assembly)
- C 3 Power Steering Torque Sensor (Power Steering Link Assembly)
- C 7 Power Steering ECU Assembly
- C 8 Power Steering ECU Assembly

- D 5 Front No. 1 Ultrasonic Sensor LH
- D 6 Front No. 1 Ultrasonic Sensor Center LH
- D 7 Front No. 1 Ultrasonic Sensor Center RH
- D 8 Front No. 1 Ultrasonic Sensor RH

- E 1 Inverter with Converter Assembly
- E 2 Inverter Bus-Bar Plate Sub-Assembly

- J 3 Injector Driver
- J 4 Knock Control Sensor (Bank 1)
- J 5 Fuel Injector Assembly No. 1 (for Direct Injection)
- J 6 Fuel Injector Assembly No. 2 (for Direct Injection)
- J 7 Fuel Injector Assembly No. 3 (for Direct Injection)
- J 8 Fuel Injector Assembly No. 4 (for Direct Injection)

- K 5 Fuel Injector Assembly No. 1 (for Port Injection)
- K 6 Fuel Injector Assembly No. 2 (for Port Injection)
- K 7 Fuel Injector Assembly No. 3 (for Port Injection)
- K 8 Fuel Injector Assembly No. 4 (for Port Injection)

- V 1 Compressor with Motor Assembly
- V 2 Inverter with Converter Assembly
- V 3 Inverter with Converter Assembly

Position of Parts in Engine Compartment <LHD 2AR-FSE>

