


Position of Parts in Engine Compartment <RHD 2AR-FSE>

\* 1: Before Oct. 2015 Production  
\* 2: From Oct. 2015 Production

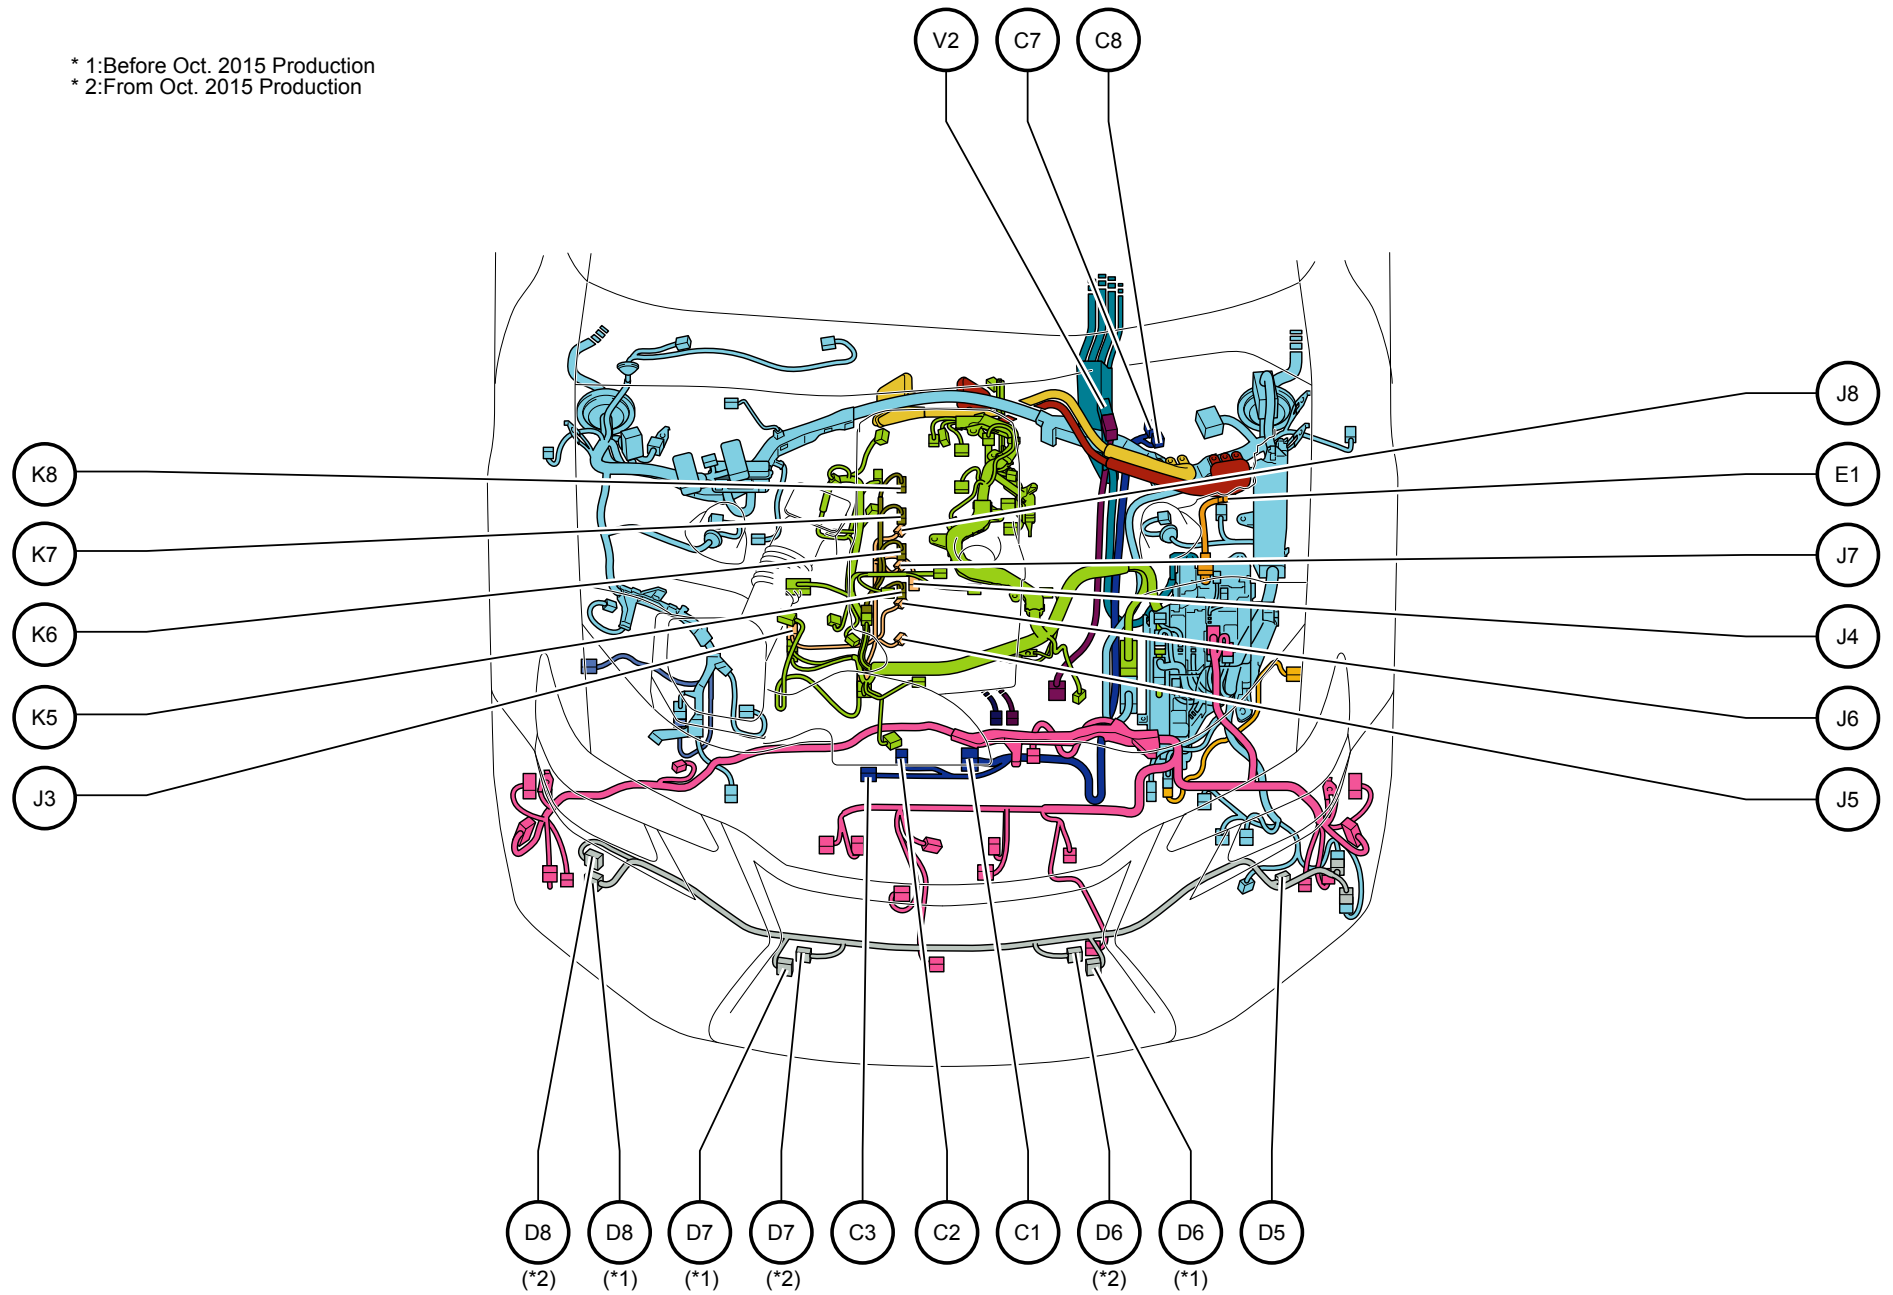

- C 1 Power Steering Motor (Power Steering Link Assembly)
- C 2 Power Steering Motor (Power Steering Link Assembly)
- C 3 Power Steering Torque Sensor (Power Steering Link Assembly)
- C 7 Power Steering ECU Assembly
- C 8 Power Steering ECU Assembly
  
- D 5 Front No. 1 Ultrasonic Sensor LH
- D 6 Front No. 1 Ultrasonic Sensor Center LH
- D 7 Front No. 1 Ultrasonic Sensor Center RH
- D 8 Front No. 1 Ultrasonic Sensor RH
  
- E 1 Inverter with Converter Assembly
  
- J 3 Injector Driver
- J 4 Knock Control Sensor (Bank 1)
- J 5 Fuel Injector Assembly No. 1 (for Direct Injection)
- J 6 Fuel Injector Assembly No. 2 (for Direct Injection)
- J 7 Fuel Injector Assembly No. 3 (for Direct Injection)
- J 8 Fuel Injector Assembly No. 4 (for Direct Injection)
  
- K 5 Fuel Injector Assembly No. 1 (for Port Injection)
- K 6 Fuel Injector Assembly No. 2 (for Port Injection)
- K 7 Fuel Injector Assembly No. 3 (for Port Injection)
- K 8 Fuel Injector Assembly No. 4 (for Port Injection)
  
- V 2 Inverter with Converter Assembly

Position of Parts in Engine Compartment <RHD 2AR-FSE>

