


Position of Parts in Engine Compartment <RHD 2GR-FXE>

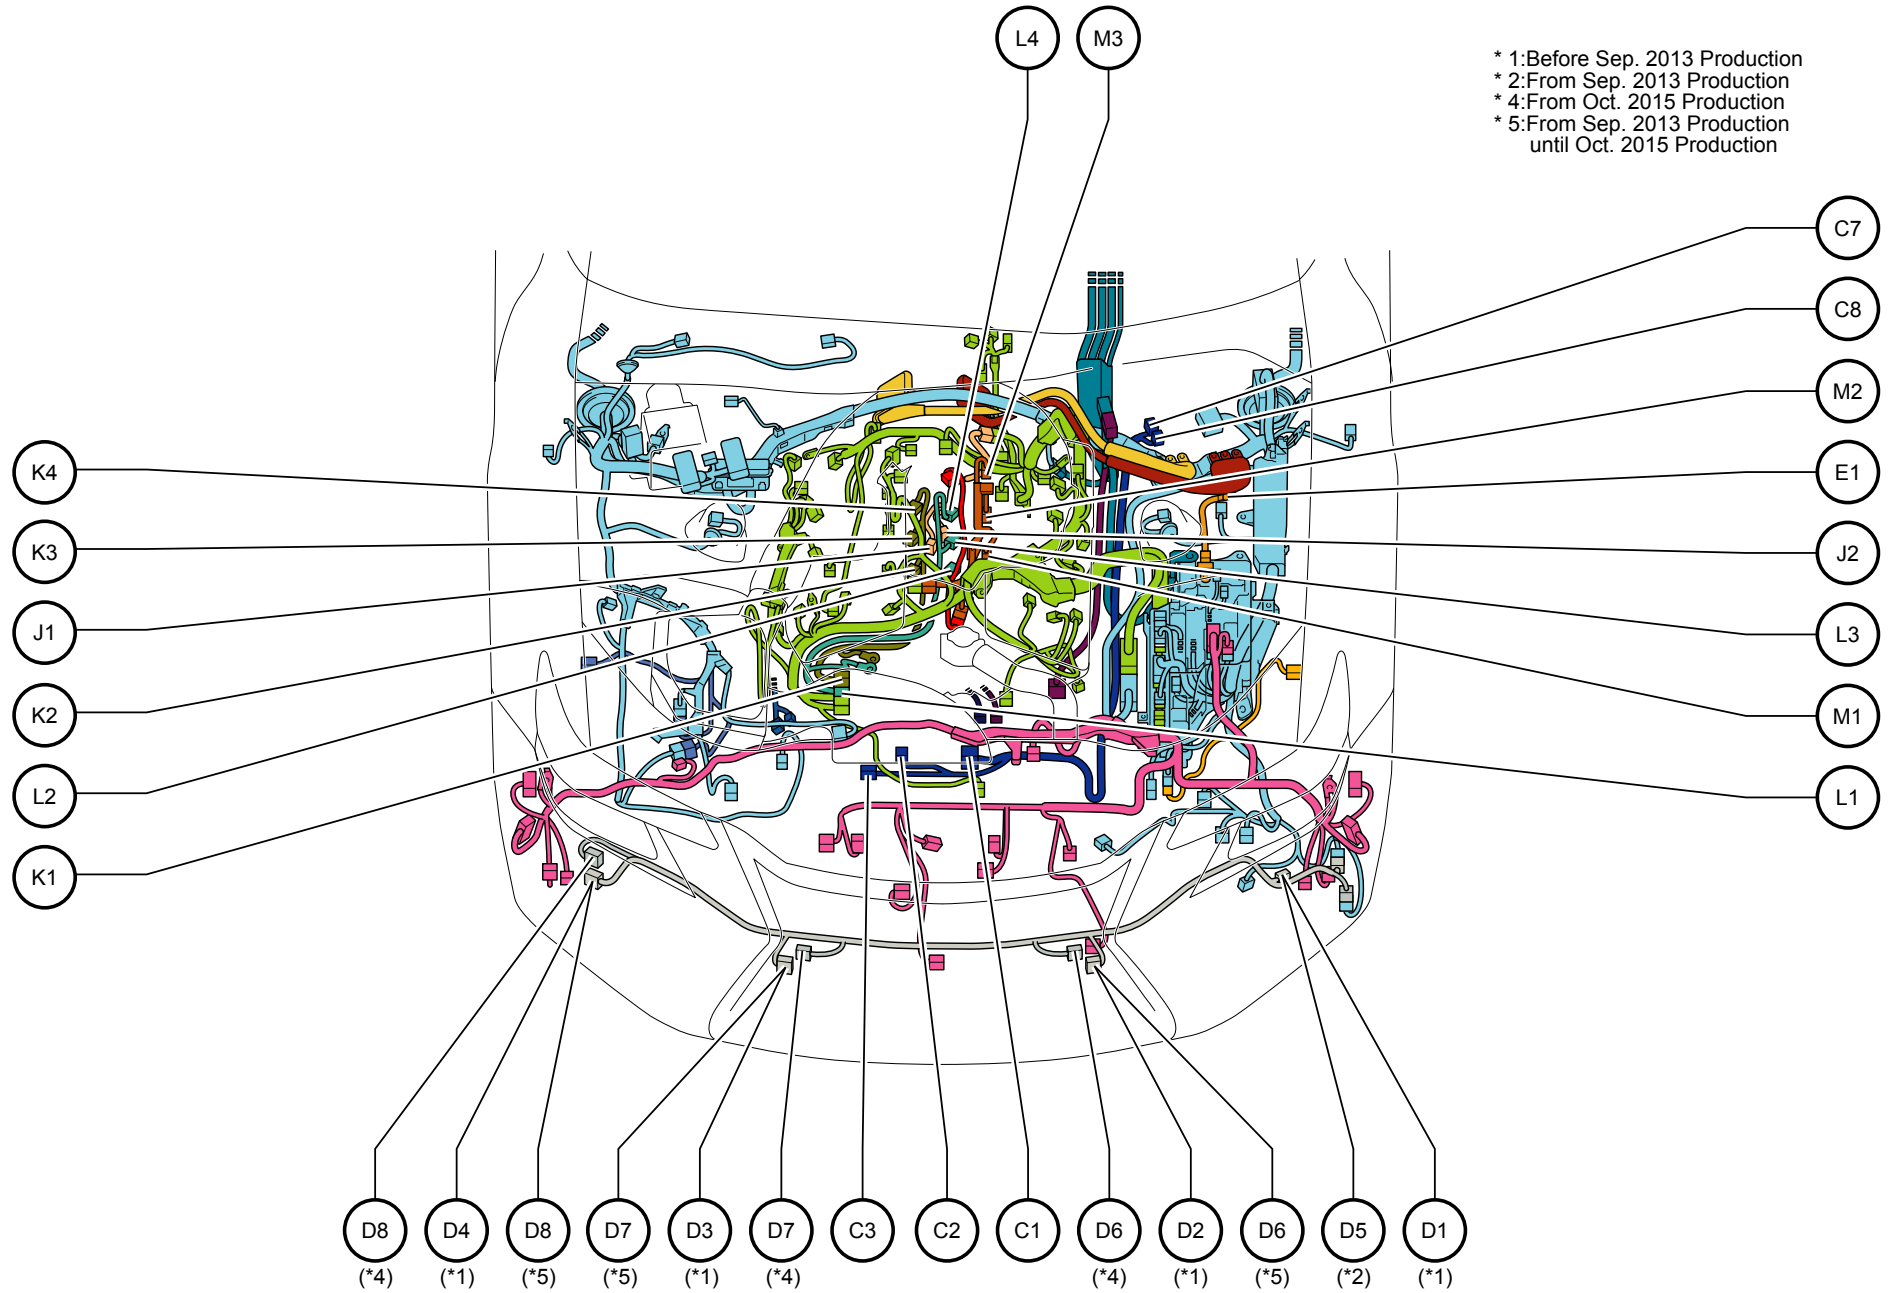

Position of Parts in Engine Compartment <RHD 2GR-FXE>

---

- C 1 Power Steering Motor (Power Steering Link Assembly)
- C 2 Power Steering Motor (Power Steering Link Assembly)
- C 3 Power Steering Torque Sensor (Power Steering Link Assembly)
- C 7 Power Steering ECU Assembly
- C 8 Power Steering ECU Assembly

- D 1 Front No. 1 Ultrasonic Sensor LH
- D 2 Front No. 1 Ultrasonic Sensor Center LH
- D 3 Front No. 1 Ultrasonic Sensor Center RH
- D 4 Front No. 1 Ultrasonic Sensor RH
- D 5 Front No. 1 Ultrasonic Sensor LH
- D 6 Front No. 1 Ultrasonic Sensor Center LH
- D 7 Front No. 1 Ultrasonic Sensor Center RH
- D 8 Front No. 1 Ultrasonic Sensor RH

- E 1 Inverter with Converter Assembly























- J 1 Knock Control Sensor (Bank 1)
- J 2 Knock Control Sensor (Bank 2)

- K 1 Injector Driver
- K 2 Fuel Injector Assembly No. 1 (for Direct Injection)
- K 3 Fuel Injector Assembly No. 3 (for Direct Injection)
- K 4 Fuel Injector Assembly No. 5 (for Direct Injection)

- L 1 Injector Driver
- L 2 Fuel Injector Assembly No. 2 (for Direct Injection)
- L 3 Fuel Injector Assembly No. 4 (for Direct Injection)
- L 4 Fuel Injector Assembly No. 6 (for Direct Injection)

- M 1 Fuel Injector Assembly No. 2 (for Port Injection)
- M 2 Fuel Injector Assembly No. 4 (for Port Injection)
- M 3 Fuel Injector Assembly No. 6 (for Port Injection)

Position of Parts in Engine Compartment <RHD 2GR-FXE>

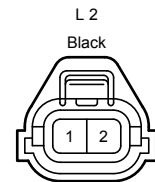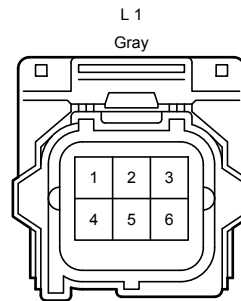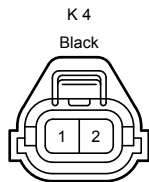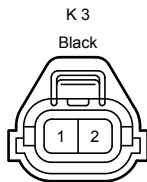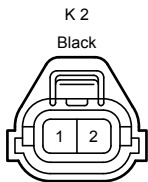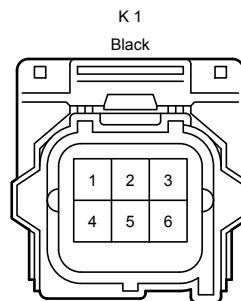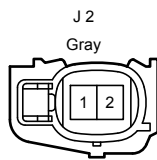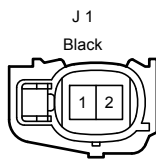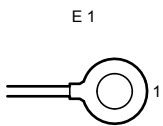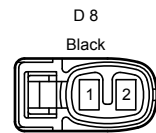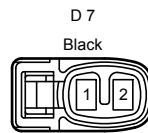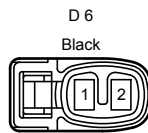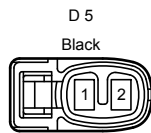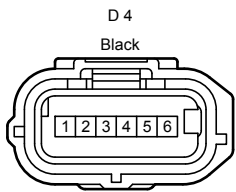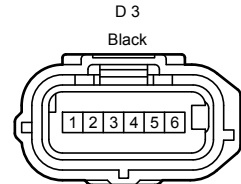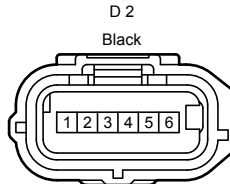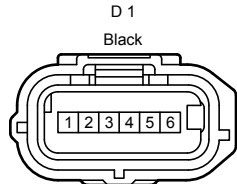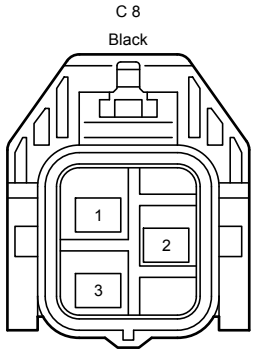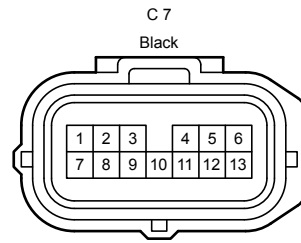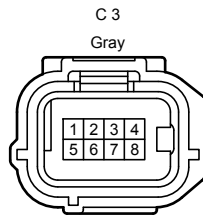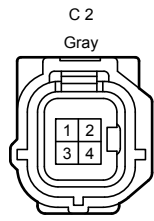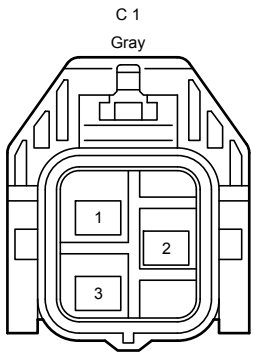

Position of Parts in Engine Compartment <RHD 2GR-FXE>

---

