


Position of Parts in Body <LHD 2GR-FXE>

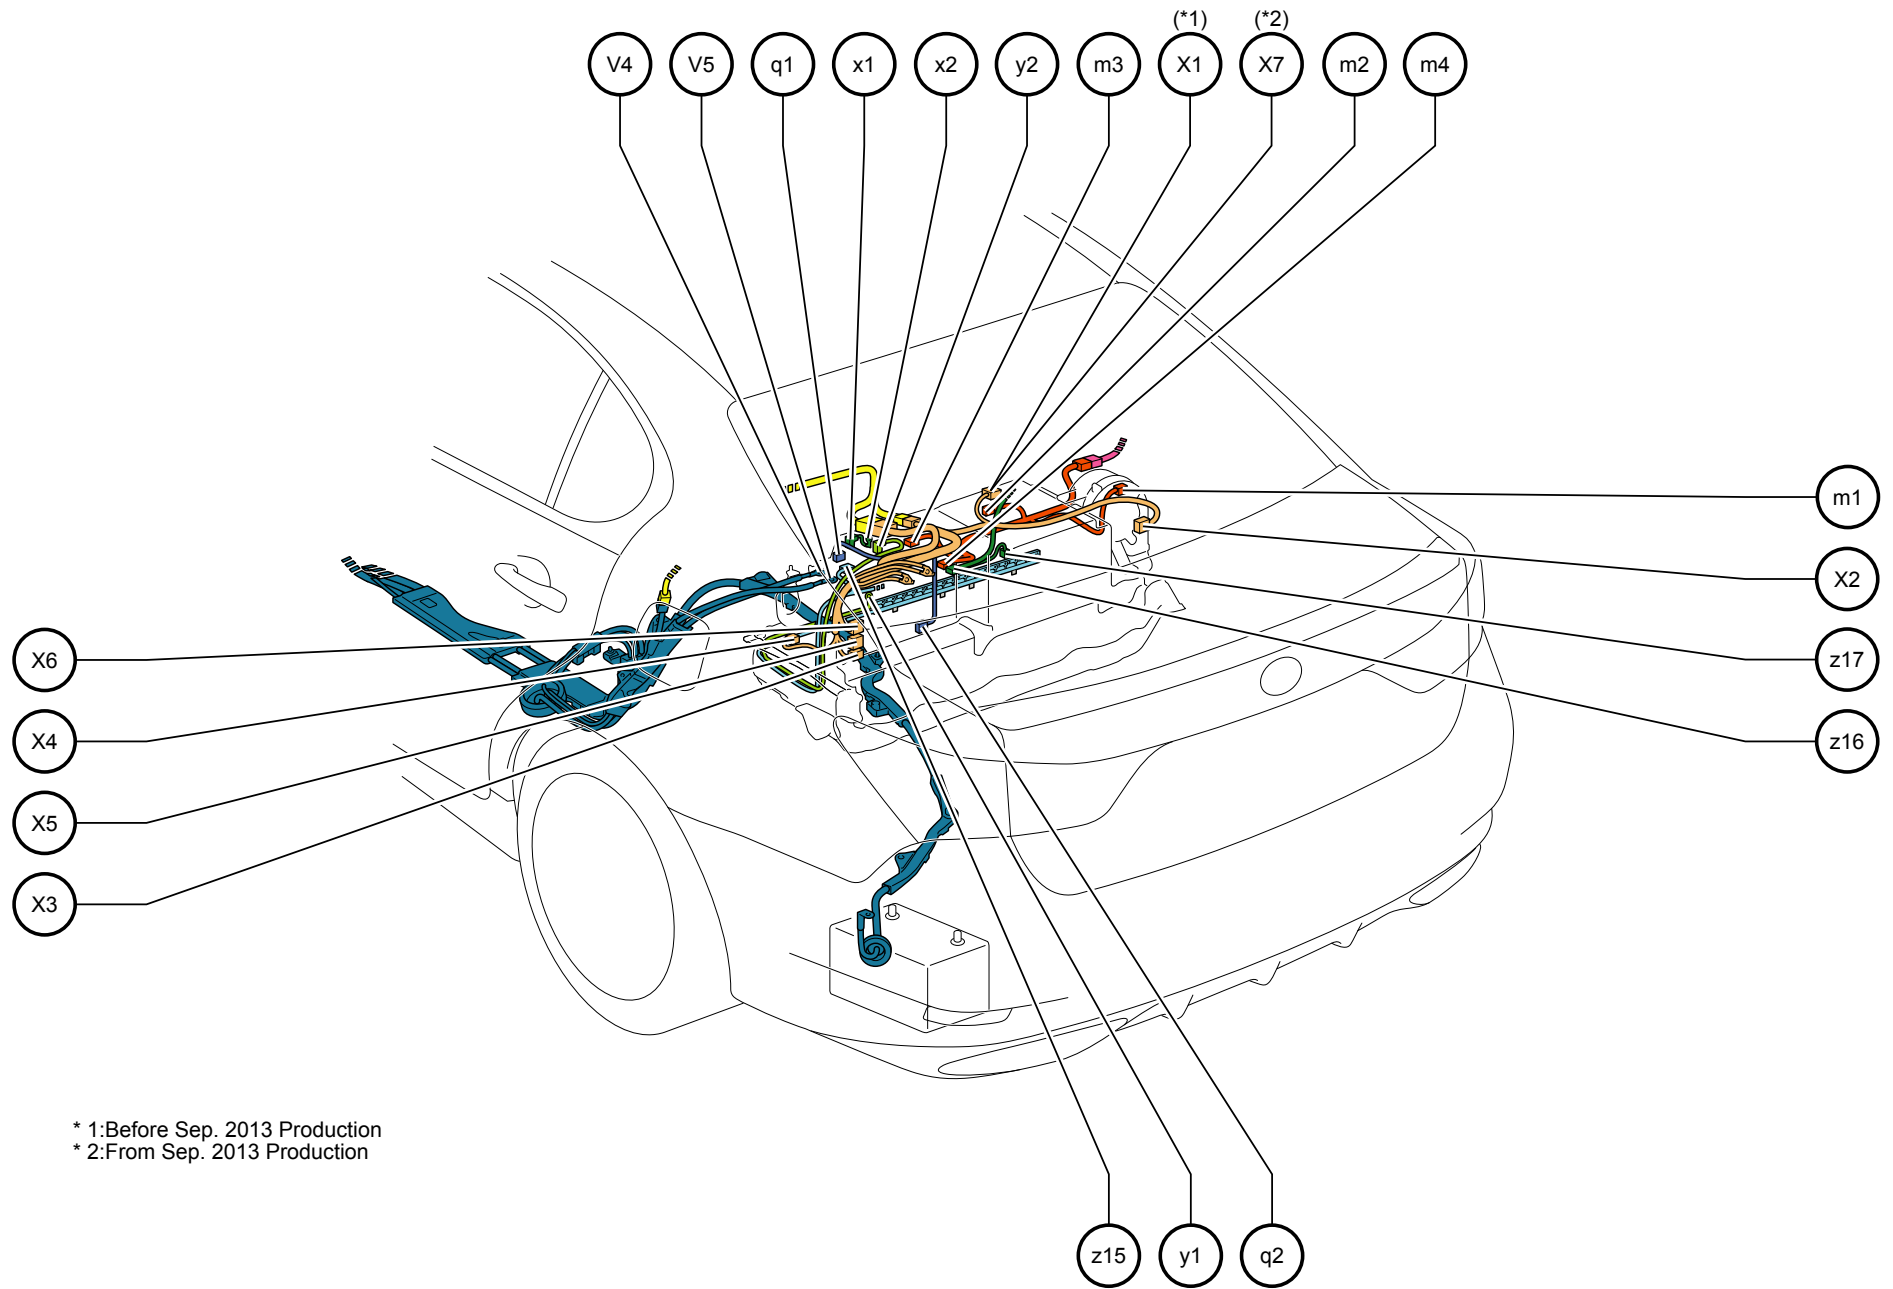

Position of Parts in Body <LHD 2GR-FXE>

---

- V 4 Hybrid Battery Junction Block Assembly
- V 5 Hybrid Battery Junction Block Assembly
  
- X 1 Brake Control Power Supply Assembly
- X 2 Voltage Inverter Assembly
- X 3 Power Steering Converter Assembly
- X 4 Battery Cooling Blower Assembly LH
- X 5 Power Steering Converter Assembly
- X 6 Power Steering Converter Assembly
- X 7 Brake Control Power Supply Assembly
  
- m 1 Battery Cooling Blower Assembly RH
- m 2 Interlock Switch (Service Plug Grip)
- m 3 Hybrid Battery Junction Block Assembly
- m 4 Battery Voltage Sensor , HV Supply Battery Assembly
  
- q 1 Hybrid Battery Junction Block Assembly
- q 2 Power Steering Converter Assembly
  
- x 1 Hybrid Battery Junction Block Assembly
- x 2 HV Supply Battery Assembly
  
- y 1 HV Supply Battery Assembly
- y 2 Hybrid Battery Junction Block Assembly
  
- z 15 Battery Voltage Sensor , HV Supply Battery Assembly
- z 16 Battery Voltage Sensor , HV Supply Battery Assembly
- z 17 HV Supply Battery Assembly , Hybrid Battery Junction Block Assembly

Position of Parts in Body <LHD 2GR-FXE>

