


Position of Parts in Body <LHD>

* 3: Before Oct. 2015 Production
 * 4: From Oct. 2015 Production

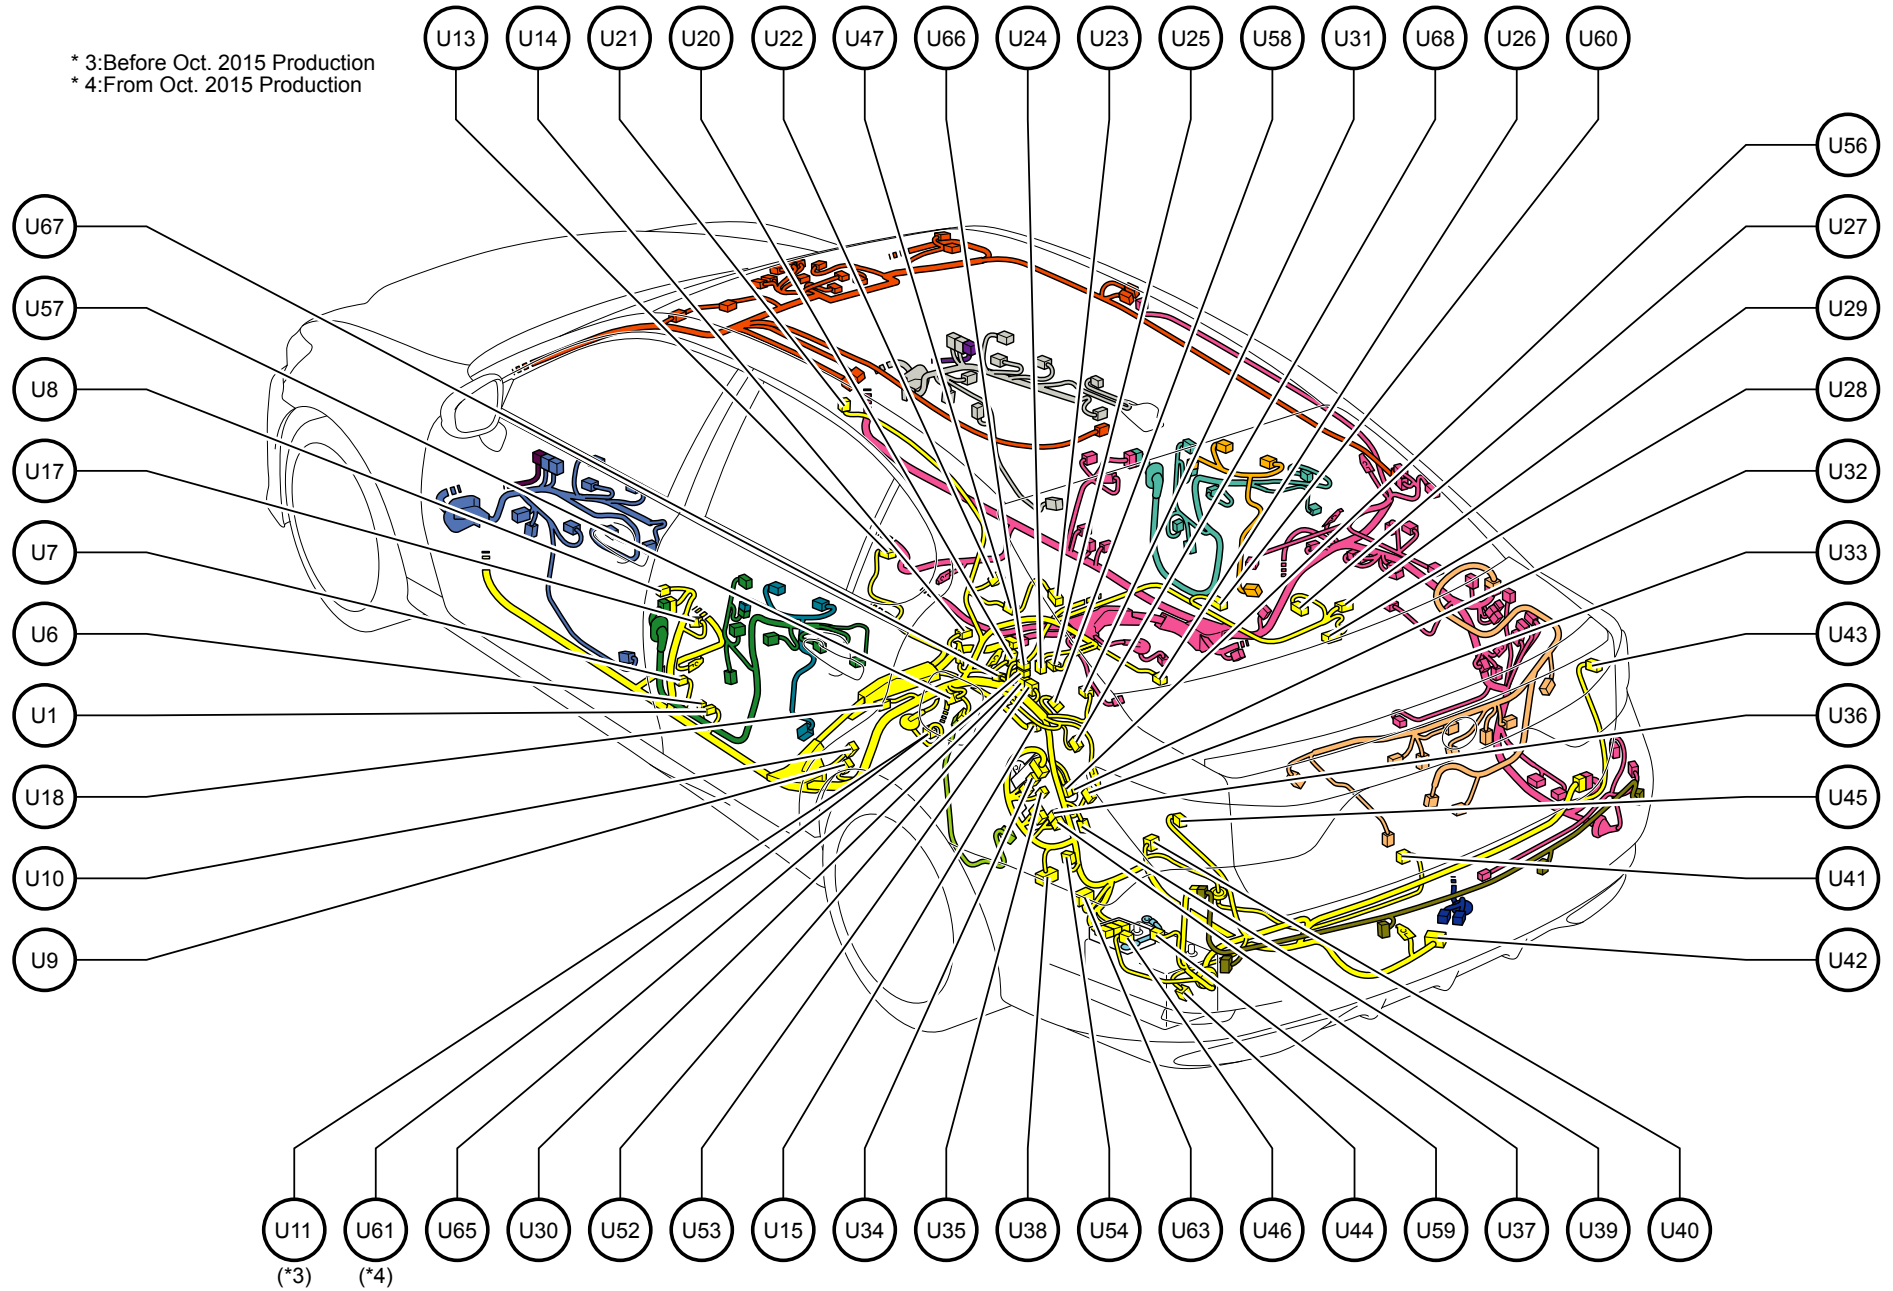



 

 
 






 
 







Position of Parts in Body <LHD>

- U 1 Front Seat Outer Belt Assembly LH
- U 6 Front Seat Outer Belt Assembly LH
- U 7 Front Seat Outer Belt Assembly LH
- U 8 Front Door Courtesy Light Switch Assembly LH
- U 9 Rear Airbag Sensor LH
- U 10 Rear Side Airbag Squib Circuit LH
- U 11 Fuel Sender Gage Assembly
- U 13 Rear No. 2 Power Outlet Socket Assembly
- U 14 No. 2 Indoor Electrical Key Antenna Assembly
- U 15 Rear Seat Inner Belt with Center Assembly LH
- U 17 Side Airbag Sensor Assembly LH
- U 18 Rear Door Courtesy Light Switch Assembly LH
- U 20 Noise Filter (Center Stop Light and Luggage Compartment Light)
- U 21 Curtain Shield Airbag Assembly LH
- U 22 Tire Pressure Warning ECU and Receiver
- U 23 Rear Window Defogger (Back Window Glass)
- U 24 Rear Seat 3 Point Type Belt Assembly Outer LH
- U 25 Rear Seat 3 Point Type Belt Assembly Outer LH
- U 26 Rear Header Speaker Assembly LH
- U 27 Center Stop Light Assembly
- U 28 No. 1 Luggage Compartment Light Assembly
- U 29 Rear Sunshade Relay (Rear Window Shade Assembly)
- U 30 Fuel Lid Lock with Motor Assembly
- U 31 Rear Absorber Control Actuator LH
- U 32 Rear Speed Sensor LH
- U 33 Luggage Closer Motor Assembly
- U 34 Seat Belt Control ECU
- U 35 Seat Belt Control ECU
- U 36 Parking Brake ECU Assembly
- U 37 Parking Brake ECU Assembly
- U 38 Fuel Pump Control ECU
- U 39 Rear Tire Pressure Monitor Initiator
- U 40 Parking Brake Actuator with Bracket Assembly
- U 41 Canister Pump Module
- U 42 Rear Steering Control ECU
- U 43 Rear Combination Light Assembly RH
- U 44 Battery Thermometer Sensor (Thermistor Assembly)
- U 45 Rear Combination Light Assembly LH
- U 46 Blind Spot Monitor Sensor LH
- U 47 Noise Filter (Rear Window Defogger)
- U 52 Junction Connector
- U 53 Junction Connector
- U 54 Junction Connector
- U 56 Junction Terminal
- U 57 Junction Connector
- U 58 Junction Connector
- U 59 Blind Spot Monitor Sensor LH
- U 60 Rear Cross Traffic Alert Buzzer (Blind Spot Monitor Buzzer)
- U 61 Fuel Sender Gage Assembly
- U 63 Fuel Pump Control ECU
- U 65 Junction Connector
- U 66 Junction Connector
- U 67 Junction Connector
- U 68 Multiplex Network Door ECU

Position of Parts in Body <LHD>




Position of Parts in Body <LHD>

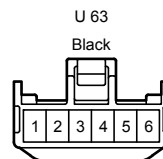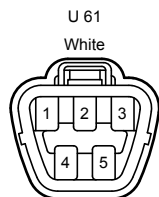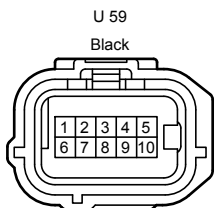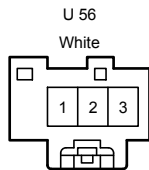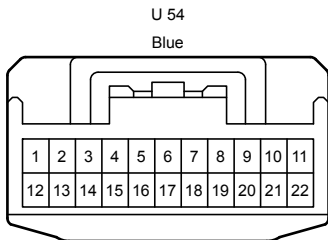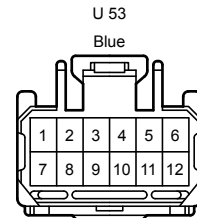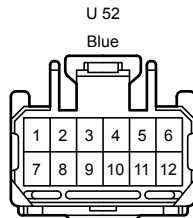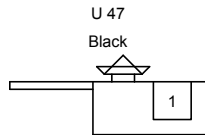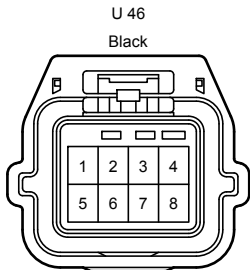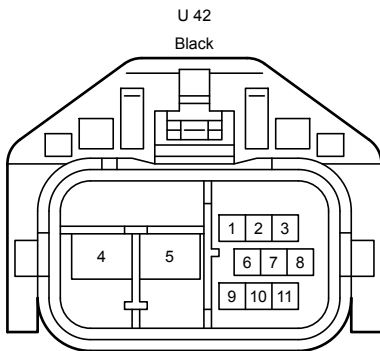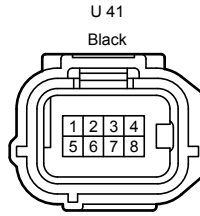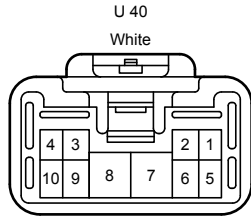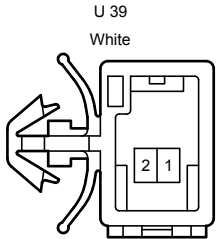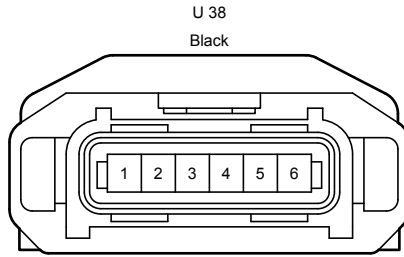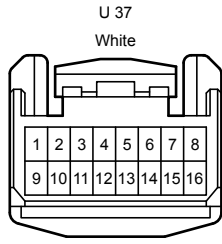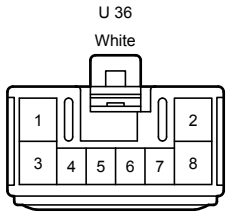


Position of Parts in Body <LHD>


U 65
White

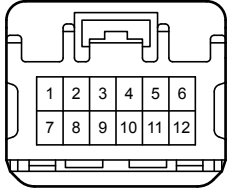

U 66
Gray

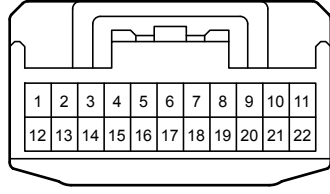

U 67
Gray

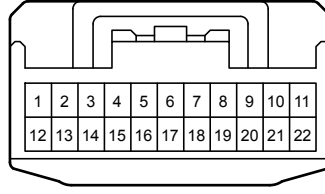

U 68
Black

