


Position of Parts in Body <LHD 2AR-FSE>

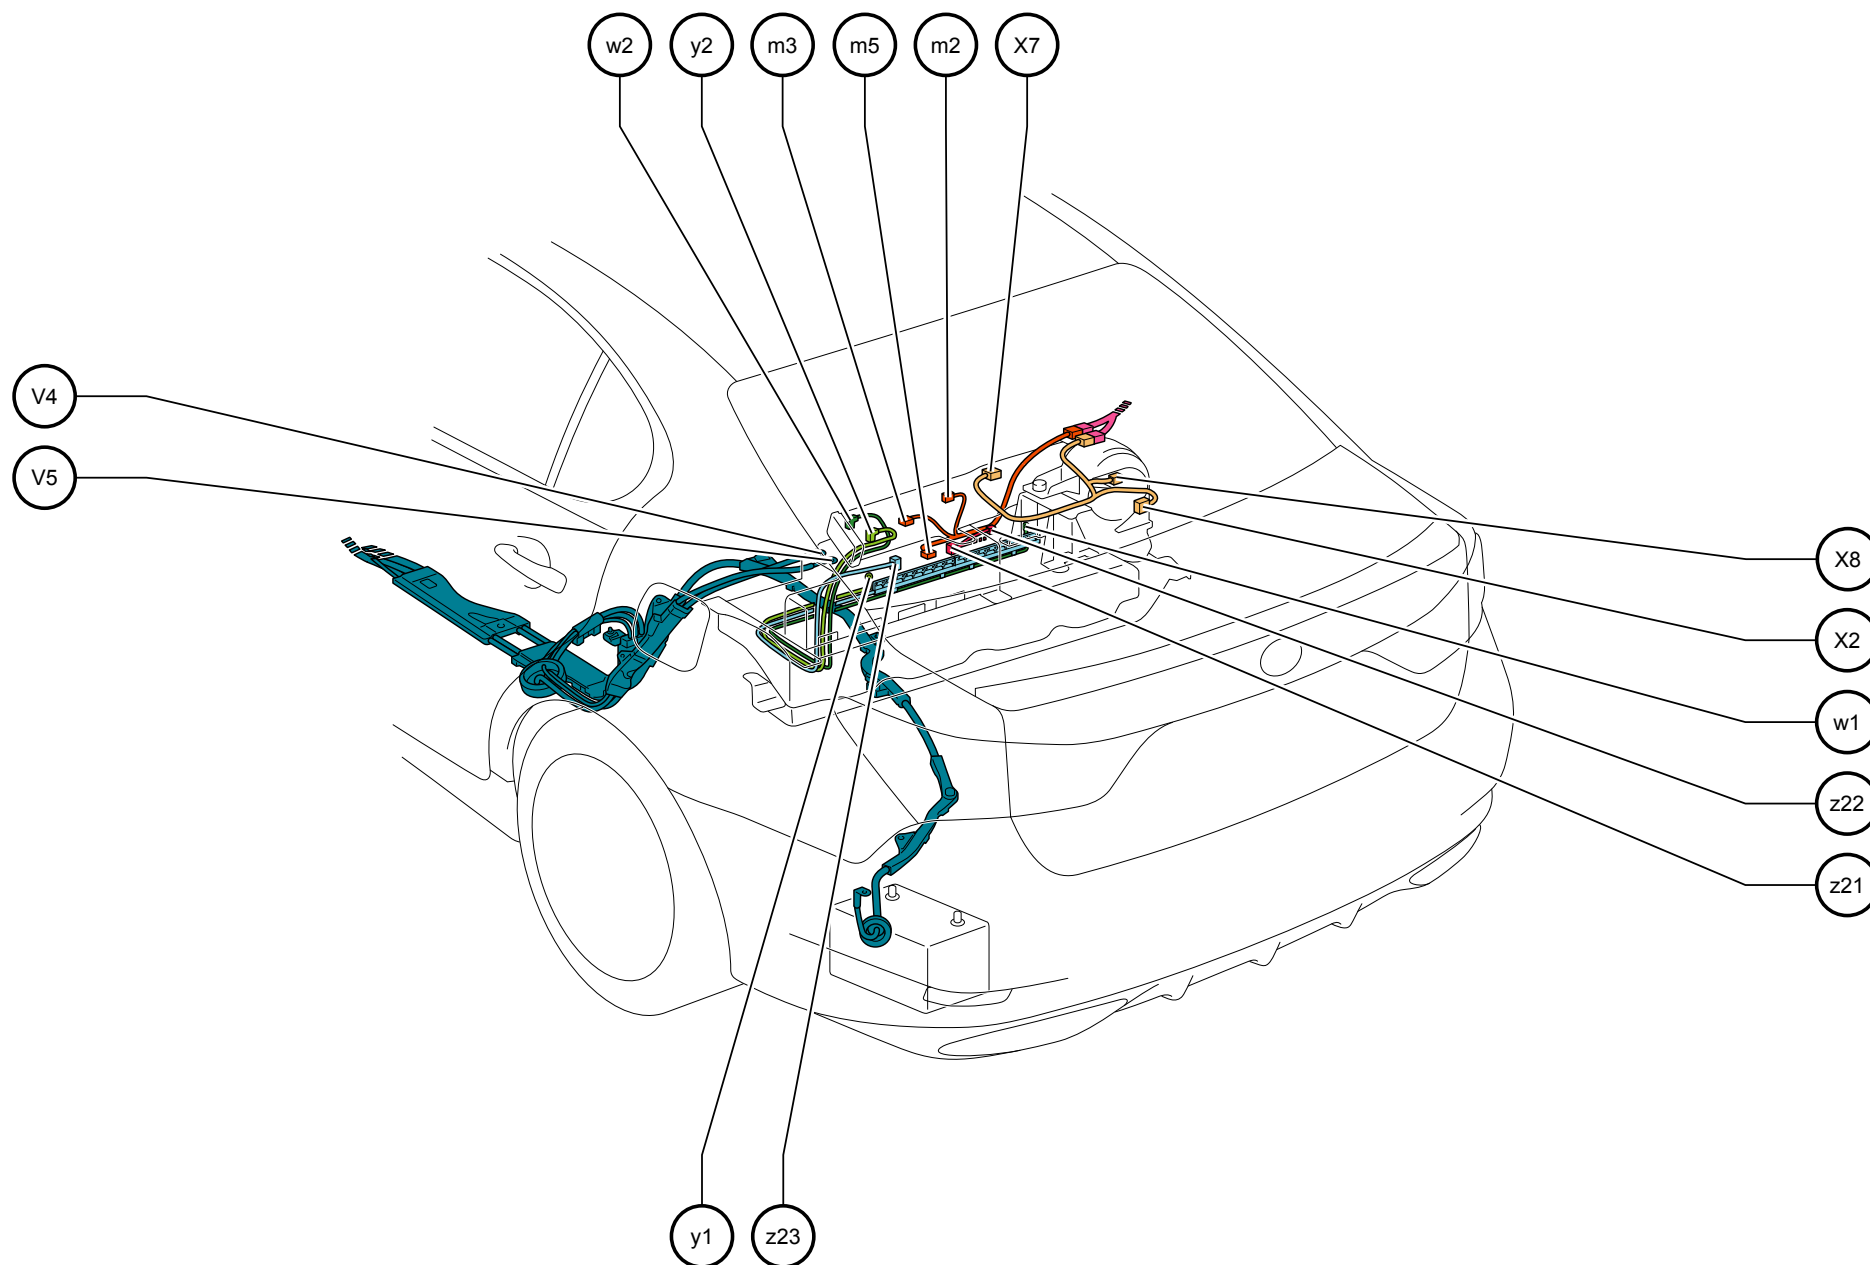

Position of Parts in Body <LHD 2AR-FSE>

- V 4 Hybrid Battery Junction Block Assembly
- V 5 Hybrid Battery Junction Block Assembly

- X 2 Voltage Inverter Assembly
- X 7 Brake Control Power Supply Assembly
- X 8 Battery Cooling Blower Assembly RH

- m 2 Interlock Switch (Service Plug Grip)
- m 3 Hybrid Battery Junction Block Assembly
- m 5 Battery Voltage Sensor , HV Supply Battery Assembly

- w 1 HV Supply Battery Assembly
- w 2 Hybrid Battery Junction Block Assembly

- y 1 HV Supply Battery Assembly
- y 2 Hybrid Battery Junction Block Assembly

- z 21 Battery Voltage Sensor , HV Supply Battery Assembly
- z 22 HV Supply Battery Assembly , Hybrid Battery Junction Block Assembly
- z 23 Battery Voltage Sensor , HV Supply Battery Assembly

Position of Parts in Body <LHD 2AR-FSE>

