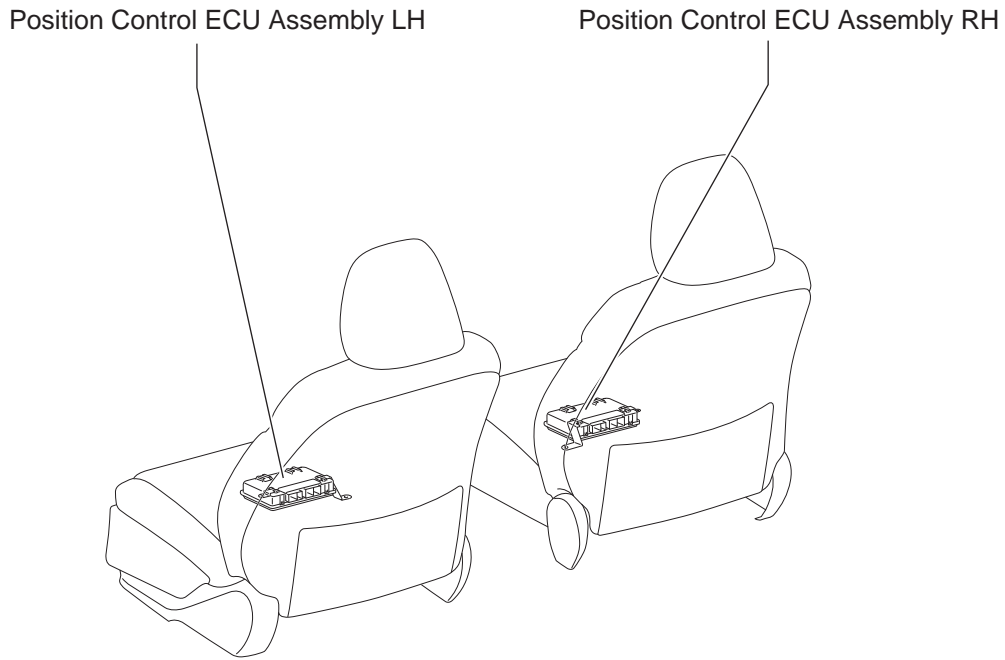# F RELAY LOCATIONS

[Seat]
(Front Seat)

Position Control ECU Assembly LH

Position Control ECU Assembly RH

[Body]

Sliding Roof Control ECU
(Sliding Roof Drive Gear
Sub-Assembly)

Front Multiplex
Network Door
ECU RH

Tire Pressure Warning
ECU and Receiver
(Door Control and Tire
Pressure Monitoring
System Receiver
Assembly) (*1)

* 1:12 Pin Type
* 2:Except 12 Pin Type

Door Control
Receiver
Assembly (*2)

Front Multiplex
Network Door
ECU LH

Vehicle Approaching
Speaker Controller

Tire Pressure Warning
ECU and Receiver

No. 1 Night
View ECU

Rear Sunshade Relay
(Rear Window Shade
Assembly)

Blind Spot
Monitor
Sensor RH

Multiplex Network
Door ECU

Stereo Component
Amplifier Assembly

**Luggage Room
J/B Assembly No. 1**

Seat Belt
Control ECU

Fuel Pump
Control ECU

Blind Spot
Monitor
Sensor LH

**Fusible Link
Block
Assembly**

Parking Brake
ECU Assembly

Rear Steering
Control ECU

LEXUS GS 450h / GS 300h (EM2791E)